 



Welcome to FireCat

**Please select category
from list on right.**

FireCat[®]

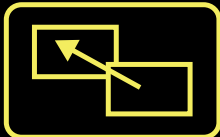

 MAIN
MENU

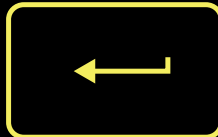

ENTER



EXIT
PROGRAM

 
MAIN MENU

- **GENERAL INFORMATION**
- ALARM PANELS
- JOCKEY PUMP CONTROLLERS
- ELECTRIC FIRE PUMP CONTROLLERS
- DIESEL ENGINE FIRE PUMP CONTROLLERS
- HIGH VOLTAGE FIRE PUMP CONTROLLERS
- POWER TRANSFER SWITCHES


Welcome to FireCat

**Please select category
from list on right.**

FireCat[®]

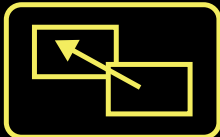

MAIN
MENU

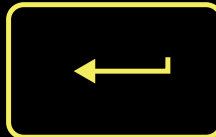 

ENTER



EXIT
PROGRAM

 
MAIN MENU

- GENERAL INFORMATION
- **ALARM PANELS**
- JOCKEY PUMP CONTROLLERS
- ELECTRIC FIRE PUMP CONTROLLERS
- DIESEL ENGINE FIRE PUMP CONTROLLERS
- HIGH VOLTAGE FIRE PUMP CONTROLLERS
- POWER TRANSFER SWITCHES


Welcome to FireCat

**Please select category
from list on right.**

FireCat[®]

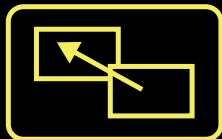

MAIN
MENU

 

ENTER



EXIT
PROGRAM

 
MAIN MENU

- GENERAL INFORMATION
- ALARM PANELS
- **JOCKEY PUMP CONTROLLERS**
- ELECTRIC FIRE PUMP CONTROLLERS
- DIESEL ENGINE FIRE PUMP CONTROLLERS
- HIGH VOLTAGE FIRE PUMP CONTROLLERS
- POWER TRANSFER SWITCHES



Welcome to FireCat

**Please select category
from list on right.**

FireCat[®]

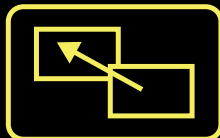

MAIN
MENU

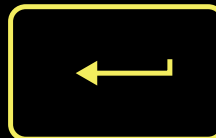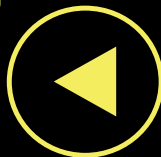  

ENTER



EXIT
PROGRAM

 
MAIN MENU

- GENERAL INFORMATION
- ALARM PANELS
- JOCKEY PUMP CONTROLLERS
- **ELECTRIC FIRE PUMP CONTROLLERS**
- DIESEL ENGINE FIRE PUMP CONTROLLERS
- HIGH VOLTAGE FIRE PUMP CONTROLLERS
- POWER TRANSFER SWITCHES



Welcome to FireCat

**Please select category
from list on right.**

FireCat[®]

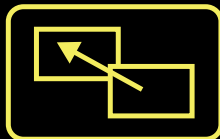

MAIN
MENU

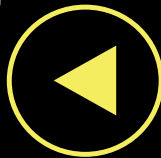  

ENTER



EXIT
PROGRAM

 
MAIN MENU

- GENERAL INFORMATION
- ALARM PANELS
- JOCKEY PUMP CONTROLLERS
- ELECTRIC FIRE PUMP CONTROLLERS
- **DIESEL ENGINE FIRE PUMP CONTROLLERS**
- HIGH VOLTAGE FIRE PUMP CONTROLLERS
- POWER TRANSFER SWITCHES


Welcome to FireCat

**Please select category
from list on right.**

FireCat[®]

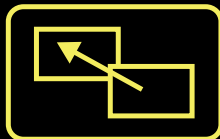

MAIN
MENU

 

ENTER



EXIT
PROGRAM

 
MAIN MENU

- GENERAL INFORMATION
- ALARM PANELS
- JOCKEY PUMP CONTROLLERS
- ELECTRIC FIRE PUMP CONTROLLERS
- DIESEL ENGINE FIRE PUMP CONTROLLERS
- **HIGH VOLTAGE FIRE PUMP CONTROLLERS**
- POWER TRANSFER SWITCHES



Welcome to FireCat

**Please select category
from list on right.**

FireCat[®]

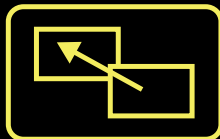

MAIN
MENU

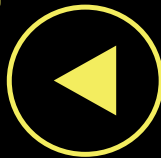  

ENTER



EXIT
PROGRAM

 
MAIN MENU

- GENERAL INFORMATION
- ALARM PANELS
- JOCKEY PUMP CONTROLLERS
- ELECTRIC FIRE PUMP CONTROLLERS
- DIESEL ENGINE FIRE PUMP CONTROLLERS
- HIGH VOLTAGE FIRE PUMP CONTROLLERS
- **POWER TRANSFER SWITCHES**



General Information

Select document to view.
(Opens in new window)

FireCat®

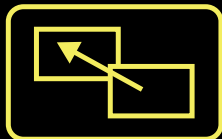

MAIN
MENU

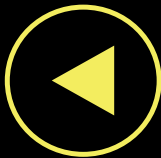  

ENTER



EXIT
PROGRAM

 
MENU

- TERMS AND CONDITIONS - SALES
- TERMS AND CONDITIONS - SERVICE
- PRESSURE SENSING LINE CONNECTIONS
- 7 YEAR LIMITED WARRANTY
- 2 YEAR RECOMMENDED SPARE PARTS KITS


General Information

Select document to view.
(Opens in new window)

FireCat®

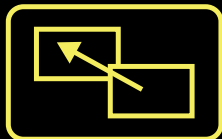

MAIN
MENU

 

ENTER



EXIT
PROGRAM

 
MENU

- TERMS AND CONDITIONS - SALES
- **TERMS AND CONDITIONS - SERVICE**
- PRESSURE SENSING LINE CONNECTIONS
- 7 YEAR LIMITED WARRANTY
- 2 YEAR RECOMMENDED SPARE PARTS KITS


General Information

Select document to view.
(Opens in new window)

FireCat®

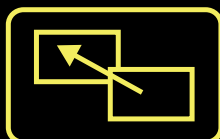

MAIN
MENU

 

ENTER



EXIT
PROGRAM

 
MENU

- TERMS AND CONDITIONS - SALES
- TERMS AND CONDITIONS - SERVICE
- **PRESSURE SENSING LINE CONNECTIONS**
- 7 YEAR LIMITED WARRANTY
- 2 YEAR RECOMMENDED SPARE PARTS KITS



General Information

Select document to view.
(Opens in new window)

FireCat®

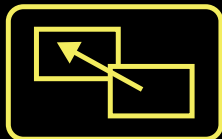

MAIN
MENU

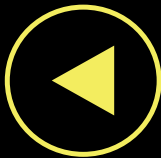  

ENTER



EXIT
PROGRAM

 
MENU

- TERMS AND CONDITIONS - SALES
- TERMS AND CONDITIONS - SERVICE
- PRESSURE SENSING LINE CONNECTIONS
- **7 YEAR LIMITED WARRANTY**
- 2 YEAR RECOMMENDED SPARE PARTS KITS


General Information

Select document to view.
(Opens in new window)

FireCat®

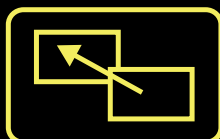

MAIN
MENU

 

ENTER



EXIT
PROGRAM

 
MENU

- TERMS AND CONDITIONS - SALES
- TERMS AND CONDITIONS - SERVICE
- PRESSURE SENSING LINE CONNECTIONS
- 7 YEAR LIMITED WARRANTY
- 2 YEAR RECOMMENDED SPARE PARTS KITS


Alarm Panels

Select required type
of alarm panel

FireCat®

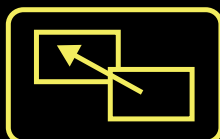

MAIN
MENU

 

ENTER



EXIT
PROGRAM

 
MENU

- TYPE A - FOR USE WITH
ELECTRIC FIRE PUMP
CONTROLLERS
- TYPE F - FOR USE WITH
DIESEL ENGINE FIRE PUMP
CONTROLLERS


Alarm Panels

Select required type
of alarm panel

FireCat®

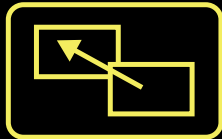

MAIN
MENU

 

ENTER



 
EXIT
PROGRAM

MENU


- TYPE A - FOR USE WITH
ELECTRIC FIRE PUMP
CONTROLLERS
- TYPE F - FOR USE WITH
DIESEL ENGINE FIRE PUMP
CONTROLLERS

Alarm Panels
Type A
Select item to open.
(Documents open in new window)

FireCat[®]

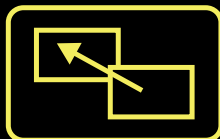

MAIN
MENU

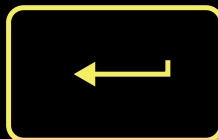 


ENTER



 
EXIT
PROGRAM

MENU



- **BROCHURE**
- PRODUCT DESCRIPTION SHEET
- DRAWINGS
- SUBMITTAL PACKAGE
- SPECIFICATIONS (pdf / word )
- MODEL NUMBER SELECTION GUIDE

Alarm Panels
Type A
Select item to open.
(Documents open in new window)

FireCat[®]

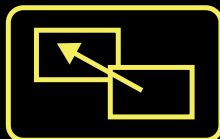

MAIN
MENU

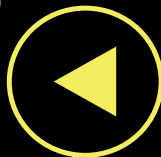  


ENTER



 
EXIT
PROGRAM

MENU



- BROCHURE
- **PRODUCT DESCRIPTION SHEET**
- DRAWINGS
- SUBMITTAL PACKAGE
- SPECIFICATIONS (pdf / word )
- MODEL NUMBER SELECTION GUIDE

Alarm Panels
Type A
Select item to open.
(Documents open in new window)

FireCat®

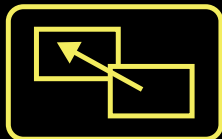

MAIN
MENU

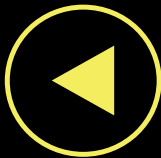  


ENTER



 
EXIT
PROGRAM

MENU



- BROCHURE
- PRODUCT DESCRIPTION SHEET
- **DRAWINGS**
- SUBMITTAL PACKAGE
- SPECIFICATIONS (pdf / word )
- MODEL NUMBER SELECTION GUIDE

Alarm Panels
Type A
Select item to open.
(Documents open in new window)

FireCat[®]

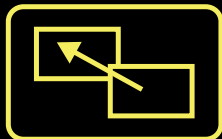

MAIN
MENU

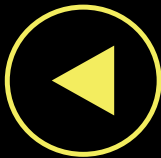  


ENTER



 
EXIT
PROGRAM

MENU


- BROCHURE
- PRODUCT DESCRIPTION SHEET
- DRAWINGS
- **SUBMITTAL PACKAGE**
- SPECIFICATIONS (pdf / word )
- MODEL NUMBER SELECTION GUIDE

Alarm Panels
Type A
Select item to open.
(Documents open in new window)

FireCat®

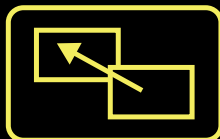

MAIN
MENU

 


ENTER



 
EXIT
PROGRAM

MENU



- BROCHURE
- PRODUCT DESCRIPTION SHEET
- DRAWINGS
- SUBMITTAL PACKAGE
- **SPECIFICATIONS (pdf / word)** 
- MODEL NUMBER SELECTION GUIDE

Alarm Panels
Type A
Select item to open.
(Documents open in new window)

FireCat®

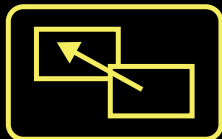

MAIN
MENU

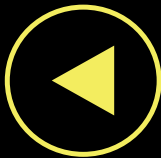  


ENTER



 
EXIT
PROGRAM

MENU


- BROCHURE
- PRODUCT DESCRIPTION SHEET
- DRAWINGS
- SUBMITTAL PACKAGE
- SPECIFICATIONS (pdf / word 
- **MODEL NUMBER SELECTION GUIDE**

Alarm Panels
Type F
Select item to open.
(Documents open in new window)

FireCat[®]

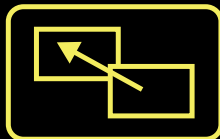

MAIN
MENU

 


ENTER



 
EXIT
PROGRAM

MENU


- **BROCHURE**
- PRODUCT DESCRIPTION SHEET
- DRAWINGS
- SUBMITTAL PACKAGE
- SPECIFICATIONS (pdf / word )
- MODEL NUMBER SELECTION GUIDE

Alarm Panels
Type F
Select item to open.
(Documents open in new
window)

FireCat[®]

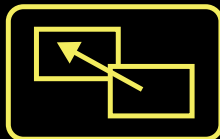

MAIN
MENU

 


ENTER



 
EXIT
PROGRAM

MENU


- BROCHURE
- **PRODUCT DESCRIPTION SHEET**
- DRAWINGS
- SUBMITTAL PACKAGE
- SPECIFICATIONS (pdf / word )
- MODEL NUMBER SELECTION GUIDE

Alarm Panels
Type F
Select item to open.
(Documents open in new window)

FireCat[®]

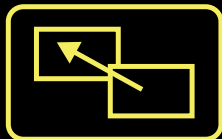

MAIN
MENU

 


ENTER



 
EXIT
PROGRAM

MENU


- BROCHURE
- PRODUCT DESCRIPTION SHEET
- **DRAWINGS**
- SUBMITTAL PACKAGE
- SPECIFICATIONS (pdf / word )
- MODEL NUMBER SELECTION GUIDE

Alarm Panels
Type F
Select item to open.
(Documents open in new window)

FireCat[®]

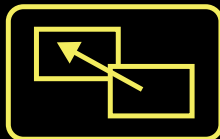

MAIN
MENU

 


ENTER



 
EXIT
PROGRAM

MENU


- BROCHURE
- PRODUCT DESCRIPTION SHEET
- DRAWINGS
- **SUBMITTAL PACKAGE**
- SPECIFICATIONS (pdf / word )
- MODEL NUMBER SELECTION GUIDE

Alarm Panels
Type F
Select item to open.
(Documents open in new window)

FireCat®

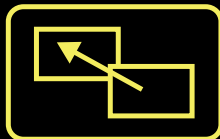

MAIN
MENU

 


ENTER



 
EXIT
PROGRAM

MENU



- BROCHURE
- PRODUCT DESCRIPTION SHEET
- DRAWINGS
- SUBMITTAL PACKAGE
- **SPECIFICATIONS (pdf / word)** 
- MODEL NUMBER SELECTION GUIDE

Alarm Panels
Type F
Select item to open.
(Documents open in new window)

FireCat[®]

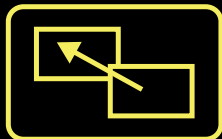

MAIN
MENU

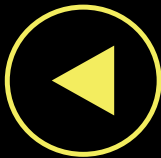  


ENTER



EXIT
PROGRAM

 
MENU

- BROCHURE
- PRODUCT DESCRIPTION SHEET
- DRAWINGS
- SUBMITTAL PACKAGE
- SPECIFICATIONS (pdf / word 
- **MODEL NUMBER SELECTION GUIDE**



ELECTRIC FIRE PUMP CONTROLLERS

Select type of controller
to view.

FireCat®

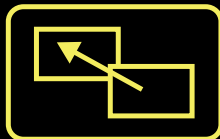

MAIN
MENU

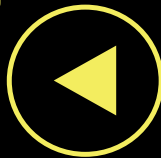  

ENTER



EXIT
PROGRAM

 
MENU

- LIMITED SERVICE
- FULL VOLTAGE STARTING
- PART WINDING STARTING
- WYE-DELTA OPEN TRANSITION STARTING
- WYE-DELTA CLOSED TRANSITION STARTING
- PRIMARY RESISTANCE STARTING
- AUTOTRANSFORMER STARTING
- DIGITAL SOFT START/STOP
- VARIABLE SPEED CONTROL


ELECTRIC FIRE PUMP CONTROLLERS

Select type of controller
to view.

FireCat®

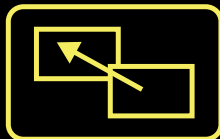

MAIN
MENU

 

ENTER



EXIT
PROGRAM

 
MENU

- LIMITED SERVICE
- **FULL VOLTAGE STARTING**
- PART WINDING STARTING
- WYE-DELTA OPEN TRANSITION STARTING
- WYE-DELTA CLOSED TRANSITION STARTING
- PRIMARY RESISTANCE STARTING
- AUTOTRANSFORMER STARTING
- DIGITAL SOFT START/STOP
- VARIABLE SPEED CONTROL


ELECTRIC FIRE PUMP CONTROLLERS

Select type of controller
to view.

FireCat®

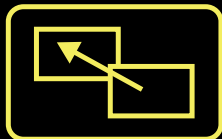

MAIN
MENU

 

ENTER



EXIT
PROGRAM

 
MENU

- LIMITED SERVICE
- FULL VOLTAGE STARTING
- **PART WINDING STARTING**
- WYE-DELTA OPEN TRANSITION STARTING
- WYE-DELTA CLOSED TRANSITION STARTING
- PRIMARY RESISTANCE STARTING
- AUTOTRANSFORMER STARTING
- DIGITAL SOFT START/STOP
- VARIABLE SPEED CONTROL


ELECTRIC FIRE PUMP CONTROLLERS

Select type of controller
to view.

FireCat®

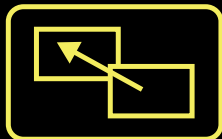

MAIN
MENU

 

ENTER



EXIT
PROGRAM

 
MENU

- LIMITED SERVICE
- FULL VOLTAGE STARTING
- PART WINDING STARTING
- **WYE-DELTA OPEN TRANSITION STARTING**
- WYE-DELTA CLOSED TRANSITION STARTING
- PRIMARY RESISTANCE STARTING
- AUTOTRANSFORMER STARTING
- DIGITAL SOFT START/STOP
- VARIABLE SPEED CONTROL


ELECTRIC FIRE PUMP CONTROLLERS

Select type of controller
to view.

FireCat®

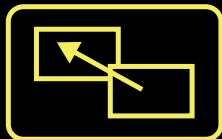

MAIN
MENU

 

ENTER



EXIT
PROGRAM

 
MENU

- LIMITED SERVICE
- FULL VOLTAGE STARTING
- PART WINDING STARTING
- WYE-DELTA OPEN TRANSITION STARTING
- **WYE-DELTA CLOSED TRANSITION STARTING**
- PRIMARY RESISTANCE STARTING
- AUTOTRANSFORMER STARTING
- DIGITAL SOFT START/STOP
- VARIABLE SPEED CONTROL


ELECTRIC FIRE PUMP CONTROLLERS

Select type of controller
to view.

FireCat®

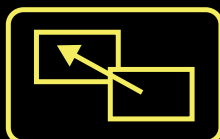

MAIN
MENU

 

ENTER



EXIT
PROGRAM

 
MENU

- LIMITED SERVICE
- FULL VOLTAGE STARTING
- PART WINDING STARTING
- WYE-DELTA OPEN TRANSITION STARTING
- WYE-DELTA CLOSED TRANSITION STARTING
- **PRIMARY RESISTANCE STARTING**
- AUTOTRANSFORMER STARTING
- DIGITAL SOFT START/STOP
- VARIABLE SPEED CONTROL


ELECTRIC FIRE PUMP CONTROLLERS

Select type of controller
to view.

FireCat®

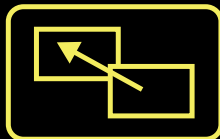

MAIN
MENU

 

ENTER



EXIT
PROGRAM

 
MENU

- LIMITED SERVICE
- FULL VOLTAGE STARTING
- PART WINDING STARTING
- WYE-DELTA OPEN TRANSITION STARTING
- WYE-DELTA CLOSED TRANSITION STARTING
- PRIMARY RESISTANCE STARTING
- **AUTOTRANSFORMER STARTING**
- DIGITAL SOFT START/STOP
- VARIABLE SPEED CONTROL


ELECTRIC FIRE PUMP CONTROLLERS

Select type of controller
to view.

FireCat®

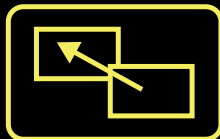

MAIN
MENU

 

ENTER



EXIT
PROGRAM

 
MENU

- LIMITED SERVICE
- FULL VOLTAGE STARTING
- PART WINDING STARTING
- WYE-DELTA OPEN TRANSITION STARTING
- WYE-DELTA CLOSED TRANSITION STARTING
- PRIMARY RESISTANCE STARTING
- AUTOTRANSFORMER STARTING
- **DIGITAL SOFT START/STOP**
- VARIABLE SPEED CONTROL


ELECTRIC FIRE PUMP CONTROLLERS

Select type of controller
to view.

FireCat®

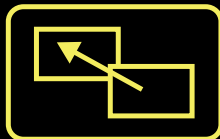

MAIN
MENU

 

ENTER



 
EXIT
PROGRAM

MENU


- LIMITED SERVICE
- FULL VOLTAGE STARTING
- PART WINDING STARTING
- WYE-DELTA OPEN TRANSITION STARTING
- WYE-DELTA CLOSED TRANSITION STARTING
- PRIMARY RESISTANCE STARTING
- AUTOTRANSFORMER STARTING
- DIGITAL SOFT START/STOP
- **VARIABLE SPEED CONTROL**

**LIMITED SERVICE FIRE
PUMP CONTROLLERS
(FULL VOLTAGE
STARTING)**

FireCat[®]

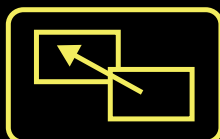

MAIN
MENU

 


ENTER



 
EXIT
PROGRAM

MENU


- **BROCHURE**
- PRODUCT DESCRIPTION SHEET
- DRAWINGS
- SUBMITTAL PACKAGES
- SPECIFICATIONS (pdf / word )
- SEQUENCE OF OPERATION
- INSTRUCTION MANUAL
- MODEL NUMBER SELECTION GUIDE

**LIMITED SERVICE FIRE
PUMP CONTROLLERS
(FULL VOLTAGE
STARTING)**

FireCat[®]

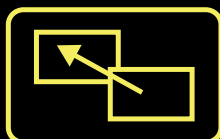

MAIN
MENU

 


ENTER



 
EXIT
PROGRAM

MENU


- BROCHURE
- **PRODUCT DESCRIPTION SHEET**
- DRAWINGS
- SUBMITTAL PACKAGES
- SPECIFICATIONS (pdf / word 
- SEQUENCE OF OPERATION
- INSTRUCTION MANUAL
- MODEL NUMBER SELECTION GUIDE

**LIMITED SERVICE FIRE
PUMP CONTROLLERS
(FULL VOLTAGE
STARTING)**

FireCat[®]

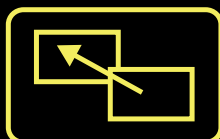

MAIN
MENU

 


ENTER



 
EXIT
PROGRAM

MENU


- BROCHURE
- PRODUCT DESCRIPTION SHEET
- **DRAWINGS**
- SUBMITTAL PACKAGES
- SPECIFICATIONS (pdf / word )
- SEQUENCE OF OPERATION
- INSTRUCTION MANUAL
- MODEL NUMBER SELECTION GUIDE

**LIMITED SERVICE FIRE
PUMP CONTROLLERS
(FULL VOLTAGE
STARTING)**

FireCat[®]

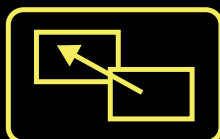

MAIN
MENU

 


ENTER



 
EXIT
PROGRAM

MENU


- BROCHURE
- PRODUCT DESCRIPTION SHEET
- DRAWINGS
- **SUBMITTAL PACKAGES**
- SPECIFICATIONS (pdf / word )
- SEQUENCE OF OPERATION
- INSTRUCTION MANUAL
- MODEL NUMBER SELECTION GUIDE

**LIMITED SERVICE FIRE
PUMP CONTROLLERS
(FULL VOLTAGE
STARTING)**

FireCat[®]

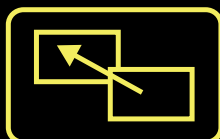

MAIN
MENU

 


ENTER



 
EXIT
PROGRAM

MENU


- BROCHURE
- PRODUCT DESCRIPTION SHEET
- DRAWINGS
- SUBMITTAL PACKAGES
- **SPECIFICATIONS** (pdf / word )
- SEQUENCE OF OPERATION
- INSTRUCTION MANUAL
- MODEL NUMBER SELECTION GUIDE

**LIMITED SERVICE FIRE
PUMP CONTROLLERS
(FULL VOLTAGE
STARTING)**

FireCat[®]

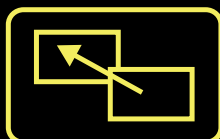

MAIN
MENU

 


ENTER



 
EXIT
PROGRAM

MENU


- BROCHURE
- PRODUCT DESCRIPTION SHEET
- DRAWINGS
- SUBMITTAL PACKAGES
- SPECIFICATIONS (pdf / word 
- **SEQUENCE OF OPERATION**
- INSTRUCTION MANUAL
- MODEL NUMBER SELECTION GUIDE

**LIMITED SERVICE FIRE
PUMP CONTROLLERS
(FULL VOLTAGE
STARTING)**

FireCat[®]

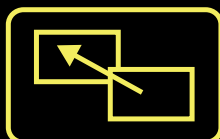

MAIN
MENU

 


ENTER



 
EXIT
PROGRAM

MENU


- BROCHURE
- PRODUCT DESCRIPTION SHEET
- DRAWINGS
- SUBMITTAL PACKAGES
- SPECIFICATIONS (pdf / word )
- SEQUENCE OF OPERATION
- **INSTRUCTION MANUAL**
- MODEL NUMBER SELECTION GUIDE

**LIMITED SERVICE FIRE
PUMP CONTROLLERS
(FULL VOLTAGE
STARTING)**

FireCat[®]

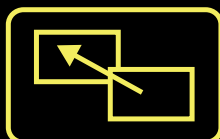

MAIN
MENU

 


ENTER



EXIT
PROGRAM

 
MENU

- BROCHURE
- PRODUCT DESCRIPTION SHEET
- DRAWINGS
- SUBMITTAL PACKAGES
- SPECIFICATIONS (pdf / word 
- SEQUENCE OF OPERATION
- INSTRUCTION MANUAL
- **MODEL NUMBER SELECTION GUIDE**


LIMITED SERVICE FIRE PUMP CONTROLLERS

DRAWINGS

FireCat®

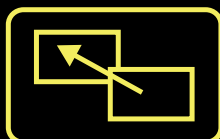

MAIN
MENU

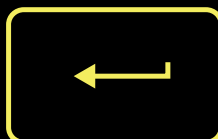 

ENTER



EXIT
PROGRAM

 
MENU

- **DIMENSIONS**
- DIMENSIONS WITH TRANSFER SWITCH
- WIRING SCHEMATIC
- WIRING SCHEMATIC WITH TRANSFER SWITCH
- FIELD CONNECTIONS
- FIELD CONNECTIONS WITH TRANSFER SWITCH


LIMITED SERVICE FIRE PUMP CONTROLLERS

DRAWINGS

FireCat®

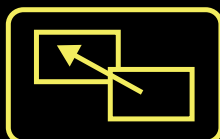

MAIN
MENU

 

ENTER



EXIT
PROGRAM

 
MENU

- DIMENSIONS
- **DIMENSIONS WITH TRANSFER SWITCH**
- WIRING SCHEMATIC
- WIRING SCHEMATIC WITH TRANSFER SWITCH
- FIELD CONNECTIONS
- FIELD CONNECTIONS WITH TRANSFER SWITCH


LIMITED SERVICE FIRE PUMP CONTROLLERS

DRAWINGS

FireCat®

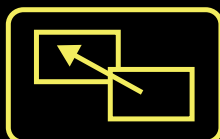

MAIN
MENU

 

ENTER



EXIT
PROGRAM

 
MENU

- DIMENSIONS
- DIMENSIONS WITH TRANSFER SWITCH
- **WIRING SCHEMATIC**
- WIRING SCHEMATIC WITH TRANSFER SWITCH
- FIELD CONNECTIONS
- FIELD CONNECTIONS WITH TRANSFER SWITCH


LIMITED SERVICE FIRE PUMP CONTROLLERS

DRAWINGS

FireCat®

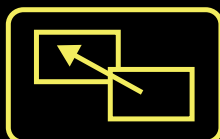

MAIN
MENU

 

ENTER



EXIT
PROGRAM

 
MENU

- DIMENSIONS
- DIMENSIONS WITH TRANSFER SWITCH
- WIRING SCHEMATIC
- **WIRING SCHEMATIC WITH TRANSFER SWITCH**
- FIELD CONNECTIONS
- FIELD CONNECTIONS WITH TRANSFER SWITCH


LIMITED SERVICE FIRE PUMP CONTROLLERS

DRAWINGS

FireCat®

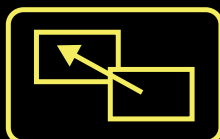

MAIN
MENU

 

ENTER



EXIT
PROGRAM

 
MENU

- DIMENSIONS
- DIMENSIONS WITH TRANSFER SWITCH
- WIRING SCHEMATIC
- WIRING SCHEMATIC WITH TRANSFER SWITCH
- **FIELD CONNECTIONS**
- FIELD CONNECTIONS WITH TRANSFER SWITCH


LIMITED SERVICE FIRE PUMP CONTROLLERS

DRAWINGS

FireCat®

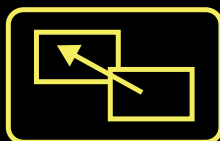

MAIN
MENU

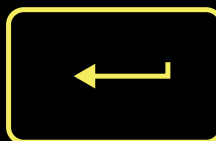 

ENTER



 
EXIT
PROGRAM

MENU


- DIMENSIONS
- DIMENSIONS WITH TRANSFER SWITCH
- WIRING SCHEMATIC
- WIRING SCHEMATIC WITH TRANSFER SWITCH
- FIELD CONNECTIONS
- **FIELD CONNECTIONS WITH TRANSFER SWITCH**

**ELECTRIC FIRE PUMP
CONTROLLERS
FULL VOLTAGE
STARTING**

FireCat[®]

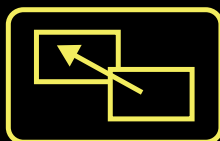

MAIN
MENU

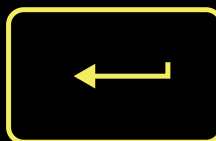 


ENTER



 
EXIT
PROGRAM

MENU


- **BROCHURE**
- PRODUCT DESCRIPTION SHEET
- DRAWINGS
- SUBMITTAL PACKAGES
- SPECIFICATIONS (pdf / word )
- SEQUENCE OF OPERATION
- INSTRUCTION MANUAL
- MODEL NUMBER SELECTION GUIDE

**ELECTRIC FIRE PUMP
CONTROLLERS
FULL VOLTAGE
STARTING**

FireCat[®]

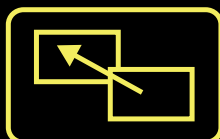

MAIN
MENU

 


ENTER



 
EXIT
PROGRAM

MENU


- BROCHURE
- **PRODUCT DESCRIPTION SHEET**
- DRAWINGS
- SUBMITTAL PACKAGES
- SPECIFICATIONS (pdf / word )
- SEQUENCE OF OPERATION
- INSTRUCTION MANUAL
- MODEL NUMBER SELECTION GUIDE

**ELECTRIC FIRE PUMP
CONTROLLERS
FULL VOLTAGE
STARTING**

FireCat[®]

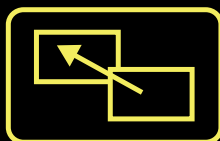

MAIN
MENU

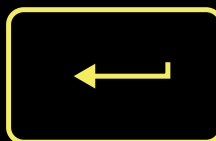 


ENTER



 
EXIT
PROGRAM

MENU


- BROCHURE
- PRODUCT DESCRIPTION SHEET
- **DRAWINGS**
- SUBMITTAL PACKAGES
- SPECIFICATIONS (pdf / word )
- SEQUENCE OF OPERATION
- INSTRUCTION MANUAL
- MODEL NUMBER SELECTION GUIDE

**ELECTRIC FIRE PUMP
CONTROLLERS
FULL VOLTAGE
STARTING**

FireCat[®]

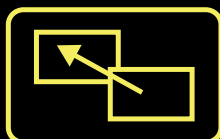

MAIN
MENU

 


ENTER



 
EXIT
PROGRAM

MENU


- BROCHURE
- PRODUCT DESCRIPTION SHEET
- DRAWINGS
- **SUBMITTAL PACKAGES**
- SPECIFICATIONS (pdf / word )
- SEQUENCE OF OPERATION
- INSTRUCTION MANUAL
- MODEL NUMBER SELECTION GUIDE

**ELECTRIC FIRE PUMP
CONTROLLERS
FULL VOLTAGE
STARTING**

FireCat[®]

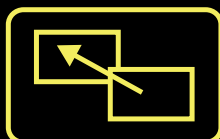

MAIN
MENU

 


ENTER



 
EXIT
PROGRAM

MENU


- BROCHURE
- PRODUCT DESCRIPTION SHEET
- DRAWINGS
- SUBMITTAL PACKAGES
- **SPECIFICATIONS (pdf / word)** 
- SEQUENCE OF OPERATION
- INSTRUCTION MANUAL
- MODEL NUMBER SELECTION GUIDE

**ELECTRIC FIRE PUMP
CONTROLLERS
FULL VOLTAGE
STARTING**

FireCat[®]

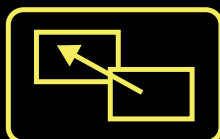

MAIN
MENU

 


ENTER



 
EXIT
PROGRAM

MENU


- BROCHURE
- PRODUCT DESCRIPTION SHEET
- DRAWINGS
- SUBMITTAL PACKAGES
- SPECIFICATIONS (pdf / word 
- **SEQUENCE OF OPERATION**
- INSTRUCTION MANUAL
- MODEL NUMBER SELECTION GUIDE

**ELECTRIC FIRE PUMP
CONTROLLERS
FULL VOLTAGE
STARTING**

FireCat[®]

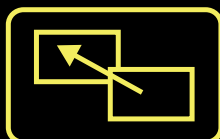

MAIN
MENU

 


ENTER



 
EXIT
PROGRAM

MENU


- BROCHURE
- PRODUCT DESCRIPTION SHEET
- DRAWINGS
- SUBMITTAL PACKAGES
- SPECIFICATIONS (pdf / word )
- SEQUENCE OF OPERATION
- **INSTRUCTION MANUAL**
- MODEL NUMBER SELECTION GUIDE

**ELECTRIC FIRE PUMP
CONTROLLERS
FULL VOLTAGE
STARTING**

FireCat[®]

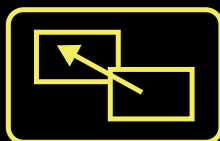

MAIN
MENU

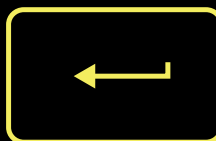 


ENTER



 
EXIT
PROGRAM

MENU


- BROCHURE
- PRODUCT DESCRIPTION SHEET
- DRAWINGS
- SUBMITTAL PACKAGES
- SPECIFICATIONS (pdf / word )
- SEQUENCE OF OPERATION
- INSTRUCTION MANUAL
- **MODEL NUMBER SELECTION GUIDE**

**ELECTRIC FIRE PUMP
CONTROLLERS
PART WINDING
STARTING**

FireCat[®]

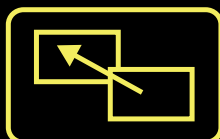

MAIN
MENU

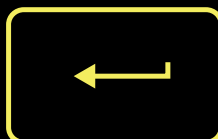 


ENTER



 
EXIT
PROGRAM

MENU


- **BROCHURE**
- PRODUCT DESCRIPTION SHEET
- DRAWINGS
- SUBMITTAL PACKAGES
- SPECIFICATIONS (pdf / word )
- SEQUENCE OF OPERATION
- INSTRUCTION MANUAL
- MODEL NUMBER SELECTION GUIDE

**ELECTRIC FIRE PUMP
CONTROLLERS
PART WINDING
STARTING**

FireCat[®]

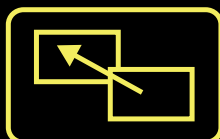

MAIN
MENU

 


ENTER



 
EXIT
PROGRAM

MENU


- BROCHURE
- **PRODUCT DESCRIPTION SHEET**
- DRAWINGS
- SUBMITTAL PACKAGES
- SPECIFICATIONS (pdf / word )
- SEQUENCE OF OPERATION
- INSTRUCTION MANUAL
- MODEL NUMBER SELECTION GUIDE

**ELECTRIC FIRE PUMP
CONTROLLERS
PART WINDING
STARTING**

FireCat[®]

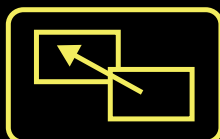

MAIN
MENU

 


ENTER



 
EXIT
PROGRAM

MENU


- BROCHURE
- PRODUCT DESCRIPTION SHEET
- **DRAWINGS**
- SUBMITTAL PACKAGES
- SPECIFICATIONS (pdf / word )
- SEQUENCE OF OPERATION
- INSTRUCTION MANUAL
- MODEL NUMBER SELECTION GUIDE

**ELECTRIC FIRE PUMP
CONTROLLERS
PART WINDING
STARTING**

FireCat[®]

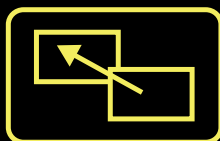

MAIN
MENU

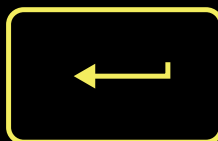 


ENTER



 
EXIT
PROGRAM

MENU


- BROCHURE
- PRODUCT DESCRIPTION SHEET
- DRAWINGS
- **SUBMITTAL PACKAGES**
- SPECIFICATIONS (pdf / word )
- SEQUENCE OF OPERATION
- INSTRUCTION MANUAL
- MODEL NUMBER SELECTION GUIDE

**ELECTRIC FIRE PUMP
CONTROLLERS
PART WINDING
STARTING**

FireCat[®]

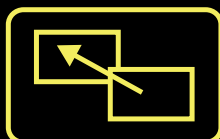

MAIN
MENU

 


ENTER



 
EXIT
PROGRAM

MENU


- BROCHURE
- PRODUCT DESCRIPTION SHEET
- DRAWINGS
- SUBMITTAL PACKAGES
- **SPECIFICATIONS (pdf / word)** 
- SEQUENCE OF OPERATION
- INSTRUCTION MANUAL
- MODEL NUMBER SELECTION GUIDE

**ELECTRIC FIRE PUMP
CONTROLLERS
PART WINDING
STARTING**

FireCat[®]

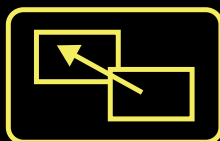

MAIN
MENU

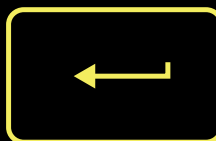 


ENTER



 
EXIT
PROGRAM

MENU


- BROCHURE
- PRODUCT DESCRIPTION SHEET
- DRAWINGS
- SUBMITTAL PACKAGES
- SPECIFICATIONS (pdf / word 
- **SEQUENCE OF OPERATION**
- INSTRUCTION MANUAL
- MODEL NUMBER SELECTION GUIDE

**ELECTRIC FIRE PUMP
CONTROLLERS
PART WINDING
STARTING**

FireCat[®]

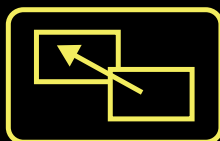

MAIN
MENU

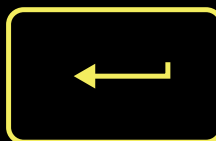 


ENTER



 
EXIT
PROGRAM

MENU


- BROCHURE
- PRODUCT DESCRIPTION SHEET
- DRAWINGS
- SUBMITTAL PACKAGES
- SPECIFICATIONS (pdf / word )
- SEQUENCE OF OPERATION
- **INSTRUCTION MANUAL**
- MODEL NUMBER SELECTION GUIDE

**ELECTRIC FIRE PUMP
CONTROLLERS
PART WINDING
STARTING**

FireCat[®]

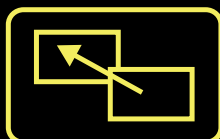

MAIN
MENU

 


ENTER



 
EXIT
PROGRAM

MENU



- BROCHURE
- PRODUCT DESCRIPTION SHEET
- DRAWINGS
- SUBMITTAL PACKAGES
- SPECIFICATIONS (pdf / word 
- SEQUENCE OF OPERATION
- INSTRUCTION MANUAL
- **MODEL NUMBER SELECTION GUIDE**

**ELECTRIC FIRE PUMP
CONTROLLERS
WYE-DELTA OPEN
TRANSITION STARTING**

FireCat[®]

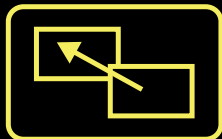

MAIN
MENU

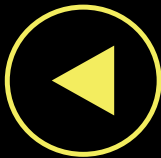  


ENTER



 
EXIT
PROGRAM

MENU


- **BROCHURE**
- PRODUCT DESCRIPTION SHEET
- DRAWINGS
- SUBMITTAL PACKAGES
- SPECIFICATIONS (pdf / word )
- SEQUENCE OF OPERATION
- INSTRUCTION MANUAL
- MODEL NUMBER SELECTION GUIDE

**ELECTRIC FIRE PUMP
CONTROLLERS
WYE-DELTA OPEN
TRANSITION STARTING**

FireCat[®]

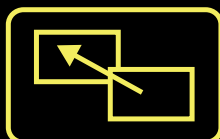

MAIN
MENU

 


ENTER



 
EXIT
PROGRAM

MENU


- BROCHURE
- **PRODUCT DESCRIPTION SHEET**
- DRAWINGS
- SUBMITTAL PACKAGES
- SPECIFICATIONS (pdf / word )
- SEQUENCE OF OPERATION
- INSTRUCTION MANUAL
- MODEL NUMBER SELECTION GUIDE

**ELECTRIC FIRE PUMP
CONTROLLERS
WYE-DELTA OPEN
TRANSITION STARTING**

FireCat[®]

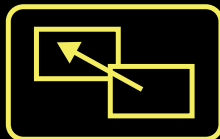

MAIN
MENU

 


ENTER



 
EXIT
PROGRAM

MENU


- BROCHURE
- PRODUCT DESCRIPTION SHEET
- **DRAWINGS**
- SUBMITTAL PACKAGES
- SPECIFICATIONS (pdf / word )
- SEQUENCE OF OPERATION
- INSTRUCTION MANUAL
- MODEL NUMBER SELECTION GUIDE

**ELECTRIC FIRE PUMP
CONTROLLERS
WYE-DELTA OPEN
TRANSITION STARTING**

FireCat[®]

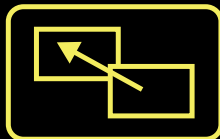

MAIN
MENU

 


ENTER



 
EXIT
PROGRAM

MENU


- BROCHURE
- PRODUCT DESCRIPTION SHEET
- DRAWINGS
- **SUBMITTAL PACKAGES**
- SPECIFICATIONS (pdf / word )
- SEQUENCE OF OPERATION
- INSTRUCTION MANUAL
- MODEL NUMBER SELECTION GUIDE

**ELECTRIC FIRE PUMP
CONTROLLERS
WYE-DELTA OPEN
TRANSITION STARTING**

FireCat[®]

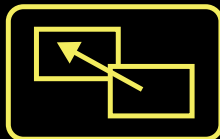

MAIN
MENU

 


ENTER



 
EXIT
PROGRAM

MENU


- BROCHURE
- PRODUCT DESCRIPTION SHEET
- DRAWINGS
- SUBMITTAL PACKAGES
- **SPECIFICATIONS (pdf / word)** 
- SEQUENCE OF OPERATION
- INSTRUCTION MANUAL
- MODEL NUMBER SELECTION GUIDE

**ELECTRIC FIRE PUMP
CONTROLLERS
WYE-DELTA OPEN
TRANSITION STARTING**

FireCat[®]

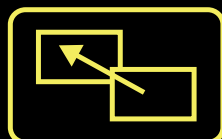

MAIN
MENU

 


ENTER



 
EXIT
PROGRAM

MENU


- BROCHURE
- PRODUCT DESCRIPTION SHEET
- DRAWINGS
- SUBMITTAL PACKAGES
- SPECIFICATIONS (pdf / word 
- **SEQUENCE OF OPERATION**
- INSTRUCTION MANUAL
- MODEL NUMBER SELECTION GUIDE

**ELECTRIC FIRE PUMP
CONTROLLERS
WYE-DELTA OPEN
TRANSITION STARTING**

FireCat[®]

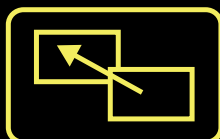

MAIN
MENU

 


ENTER



 
EXIT
PROGRAM

MENU


- BROCHURE
- PRODUCT DESCRIPTION SHEET
- DRAWINGS
- SUBMITTAL PACKAGES
- SPECIFICATIONS (pdf / word 
- SEQUENCE OF OPERATION
- **INSTRUCTION MANUAL**
- MODEL NUMBER SELECTION GUIDE

**ELECTRIC FIRE PUMP
CONTROLLERS
WYE-DELTA OPEN
TRANSITION STARTING**

FireCat[®]

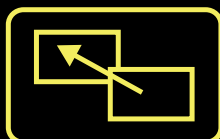

MAIN
MENU

 


ENTER



 
EXIT
PROGRAM

MENU


- BROCHURE
- PRODUCT DESCRIPTION SHEET
- DRAWINGS
- SUBMITTAL PACKAGES
- SPECIFICATIONS (pdf / word 
- SEQUENCE OF OPERATION
- INSTRUCTION MANUAL
- **MODEL NUMBER SELECTION GUIDE**

**ELECTRIC FIRE PUMP
CONTROLLERS
WYE-DELTA CLOSED
TRANSITION STARTING**

FireCat[®]

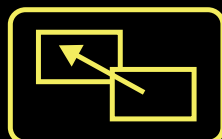

MAIN
MENU

 


ENTER



 
EXIT
PROGRAM

MENU


- **BROCHURE**
- PRODUCT DESCRIPTION SHEET
- DRAWINGS
- SUBMITTAL PACKAGES
- SPECIFICATIONS (pdf / word )
- SEQUENCE OF OPERATION
- INSTRUCTION MANUAL
- MODEL NUMBER SELECTION GUIDE

**ELECTRIC FIRE PUMP
CONTROLLERS
WYE-DELTA CLOSED
TRANSITION STARTING**

FireCat[®]

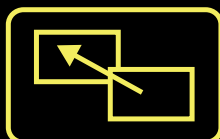

MAIN
MENU

 


ENTER



 
EXIT
PROGRAM

MENU


- BROCHURE
- **PRODUCT DESCRIPTION SHEET**
- DRAWINGS
- SUBMITTAL PACKAGES
- SPECIFICATIONS (pdf / word )
- SEQUENCE OF OPERATION
- INSTRUCTION MANUAL
- MODEL NUMBER SELECTION GUIDE

**ELECTRIC FIRE PUMP
CONTROLLERS
WYE-DELTA CLOSED
TRANSITION STARTING**

FireCat[®]

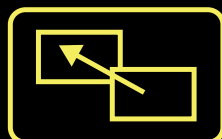

MAIN
MENU

 


ENTER



 
EXIT
PROGRAM

MENU


- BROCHURE
- PRODUCT DESCRIPTION SHEET
- **DRAWINGS**
- SUBMITTAL PACKAGES
- SPECIFICATIONS (pdf / word )
- SEQUENCE OF OPERATION
- INSTRUCTION MANUAL
- MODEL NUMBER SELECTION GUIDE

**ELECTRIC FIRE PUMP
CONTROLLERS
WYE-DELTA CLOSED
TRANSITION STARTING**

FireCat[®]

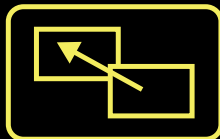

MAIN
MENU

 


ENTER



 
EXIT
PROGRAM

MENU


- BROCHURE
- PRODUCT DESCRIPTION SHEET
- DRAWINGS
- **SUBMITTAL PACKAGES**
- SPECIFICATIONS (pdf / word 
- SEQUENCE OF OPERATION
- INSTRUCTION MANUAL
- MODEL NUMBER SELECTION GUIDE

**ELECTRIC FIRE PUMP
CONTROLLERS
WYE-DELTA CLOSED
TRANSITION STARTING**

FireCat[®]

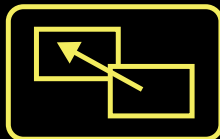

MAIN
MENU

 


ENTER



 
EXIT
PROGRAM

MENU


- BROCHURE
- PRODUCT DESCRIPTION SHEET
- DRAWINGS
- SUBMITTAL PACKAGES
- **SPECIFICATIONS (pdf / word)** 
- SEQUENCE OF OPERATION
- INSTRUCTION MANUAL
- MODEL NUMBER SELECTION GUIDE

**ELECTRIC FIRE PUMP
CONTROLLERS
WYE-DELTA CLOSED
TRANSITION STARTING**

FireCat[®]

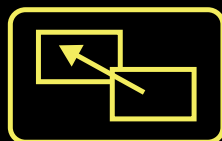

MAIN
MENU

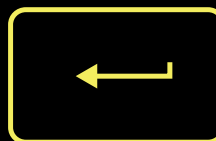 


ENTER



 
EXIT
PROGRAM

MENU


- BROCHURE
- PRODUCT DESCRIPTION SHEET
- DRAWINGS
- SUBMITTAL PACKAGES
- SPECIFICATIONS (pdf / word 
- **SEQUENCE OF OPERATION**
- INSTRUCTION MANUAL
- MODEL NUMBER SELECTION GUIDE

**ELECTRIC FIRE PUMP
CONTROLLERS
WYE-DELTA CLOSED
TRANSITION STARTING**

FireCat[®]

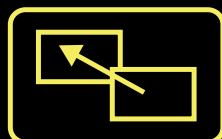

MAIN
MENU

 


ENTER



 
EXIT
PROGRAM

MENU


- BROCHURE
- PRODUCT DESCRIPTION SHEET
- DRAWINGS
- SUBMITTAL PACKAGES
- SPECIFICATIONS (pdf / word 
- SEQUENCE OF OPERATION
- **INSTRUCTION MANUAL**
- MODEL NUMBER SELECTION GUIDE

**ELECTRIC FIRE PUMP
CONTROLLERS
WYE-DELTA CLOSED
TRANSITION STARTING**

FireCat[®]

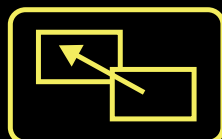

MAIN
MENU

 


ENTER



 
EXIT
PROGRAM

MENU


- BROCHURE
- PRODUCT DESCRIPTION SHEET
- DRAWINGS
- SUBMITTAL PACKAGES
- SPECIFICATIONS (pdf / word 
- SEQUENCE OF OPERATION
- INSTRUCTION MANUAL
- **MODEL NUMBER SELECTION GUIDE**

**ELECTRIC FIRE PUMP
CONTROLLERS
PRIMARY RESISTANCE
STARTING**

FireCat[®]

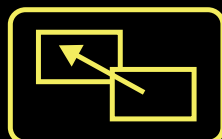

MAIN
MENU

 


ENTER



 
EXIT
PROGRAM

MENU


- **BROCHURE**
- PRODUCT DESCRIPTION SHEET
- DRAWINGS
- SUBMITTAL PACKAGES
- SPECIFICATIONS (pdf / word )
- SEQUENCE OF OPERATION
- INSTRUCTION MANUAL
- MODEL NUMBER SELECTION GUIDE

**ELECTRIC FIRE PUMP
CONTROLLERS
PRIMARY RESISTANCE
STARTING**

FireCat[®]

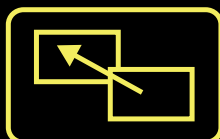

MAIN
MENU

 


ENTER



 
EXIT
PROGRAM

MENU


- BROCHURE
- **PRODUCT DESCRIPTION SHEET**
- DRAWINGS
- SUBMITTAL PACKAGES
- SPECIFICATIONS (pdf / word )
- SEQUENCE OF OPERATION
- INSTRUCTION MANUAL
- MODEL NUMBER SELECTION GUIDE

**ELECTRIC FIRE PUMP
CONTROLLERS
PRIMARY RESISTANCE
STARTING**

FireCat[®]

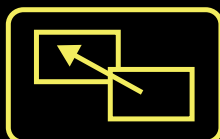

MAIN
MENU

 


ENTER



 
EXIT
PROGRAM

MENU


- BROCHURE
- PRODUCT DESCRIPTION SHEET
- **DRAWINGS**
- SUBMITTAL PACKAGES
- SPECIFICATIONS (pdf / word )
- SEQUENCE OF OPERATION
- INSTRUCTION MANUAL
- MODEL NUMBER SELECTION GUIDE

**ELECTRIC FIRE PUMP
CONTROLLERS
PRIMARY RESISTANCE
STARTING**

FireCat[®]

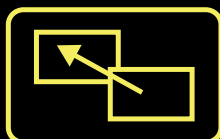

MAIN
MENU

 


ENTER



 
EXIT
PROGRAM

MENU


- BROCHURE
- PRODUCT DESCRIPTION SHEET
- DRAWINGS
- **SUBMITTAL PACKAGES**
- SPECIFICATIONS (pdf / word )
- SEQUENCE OF OPERATION
- INSTRUCTION MANUAL
- MODEL NUMBER SELECTION GUIDE

**ELECTRIC FIRE PUMP
CONTROLLERS
PRIMARY RESISTANCE
STARTING**

FireCat[®]

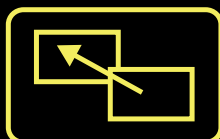

MAIN
MENU

 


ENTER



 
EXIT
PROGRAM

MENU


- BROCHURE
- PRODUCT DESCRIPTION SHEET
- DRAWINGS
- SUBMITTAL PACKAGES
- **SPECIFICATIONS (pdf / word)** 
- SEQUENCE OF OPERATION
- INSTRUCTION MANUAL
- MODEL NUMBER SELECTION GUIDE

**ELECTRIC FIRE PUMP
CONTROLLERS
PRIMARY RESISTANCE
STARTING**

FireCat[®]

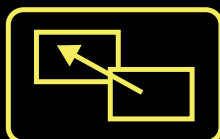

MAIN
MENU

 


ENTER



 
EXIT
PROGRAM

MENU


- BROCHURE
- PRODUCT DESCRIPTION SHEET
- DRAWINGS
- SUBMITTAL PACKAGES
- SPECIFICATIONS (pdf / word 
- **SEQUENCE OF OPERATION**
- INSTRUCTION MANUAL
- MODEL NUMBER SELECTION GUIDE

**ELECTRIC FIRE PUMP
CONTROLLERS
PRIMARY RESISTANCE
STARTING**

FireCat[®]

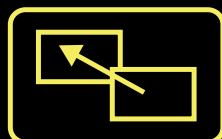

MAIN
MENU

 


ENTER



 
EXIT
PROGRAM

MENU


- BROCHURE
- PRODUCT DESCRIPTION SHEET
- DRAWINGS
- SUBMITTAL PACKAGES
- SPECIFICATIONS (pdf / word 
- SEQUENCE OF OPERATION
- **INSTRUCTION MANUAL**
- MODEL NUMBER SELECTION GUIDE

**ELECTRIC FIRE PUMP
CONTROLLERS
PRIMARY RESISTANCE
STARTING**

FireCat[®]

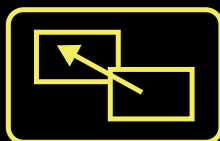

MAIN
MENU

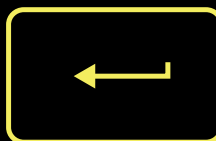 


ENTER



 
EXIT
PROGRAM

MENU


- BROCHURE
- PRODUCT DESCRIPTION SHEET
- DRAWINGS
- SUBMITTAL PACKAGES
- SPECIFICATIONS (pdf / word )
- SEQUENCE OF OPERATION
- INSTRUCTION MANUAL
- **MODEL NUMBER SELECTION GUIDE**

**ELECTRIC FIRE PUMP
CONTROLLERS
AUTOTRANSFORMER
STARTING**

FireCat[®]

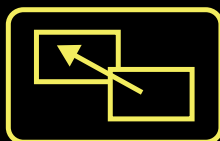

MAIN
MENU

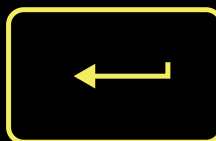 


ENTER



 
EXIT
PROGRAM

MENU


- **BROCHURE**
- PRODUCT DESCRIPTION SHEET
- DRAWINGS
- SUBMITTAL PACKAGES
- SPECIFICATIONS (pdf / word )
- SEQUENCE OF OPERATION
- INSTRUCTION MANUAL
- MODEL NUMBER SELECTION GUIDE

**ELECTRIC FIRE PUMP
CONTROLLERS
AUTOTRANSFORMER
STARTING**

FireCat[®]

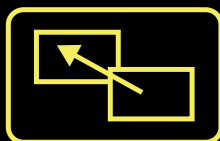

MAIN
MENU

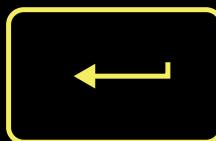 


ENTER



 
EXIT
PROGRAM

MENU


- BROCHURE
- **PRODUCT DESCRIPTION SHEET**
- DRAWINGS
- SUBMITTAL PACKAGES
- SPECIFICATIONS (pdf / word )
- SEQUENCE OF OPERATION
- INSTRUCTION MANUAL
- MODEL NUMBER SELECTION GUIDE

**ELECTRIC FIRE PUMP
CONTROLLERS
AUTOTRANSFORMER
STARTING**

FireCat[®]

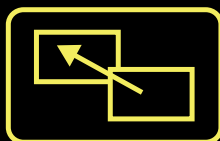

MAIN
MENU

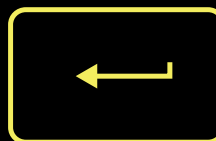 


ENTER



 
EXIT
PROGRAM

MENU


- BROCHURE
- PRODUCT DESCRIPTION SHEET
- **DRAWINGS**
- SUBMITTAL PACKAGES
- SPECIFICATIONS (pdf / word )
- SEQUENCE OF OPERATION
- INSTRUCTION MANUAL
- MODEL NUMBER SELECTION GUIDE

**ELECTRIC FIRE PUMP
CONTROLLERS
AUTOTRANSFORMER
STARTING**

FireCat[®]

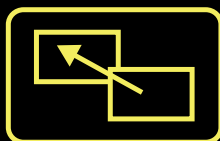

MAIN
MENU

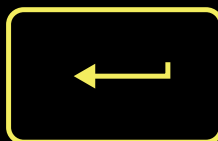 


ENTER



 
EXIT
PROGRAM

MENU


- BROCHURE
- PRODUCT DESCRIPTION SHEET
- DRAWINGS
- **SUBMITTAL PACKAGES**
- SPECIFICATIONS (pdf / word )
- SEQUENCE OF OPERATION
- INSTRUCTION MANUAL
- MODEL NUMBER SELECTION GUIDE

**ELECTRIC FIRE PUMP
CONTROLLERS
AUTOTRANSFORMER
STARTING**

FireCat[®]

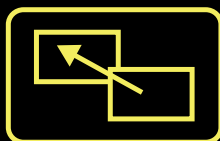

MAIN
MENU

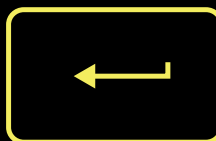 


ENTER



 
EXIT
PROGRAM

MENU


- BROCHURE
- PRODUCT DESCRIPTION SHEET
- DRAWINGS
- SUBMITTAL PACKAGES
- **SPECIFICATIONS (pdf / word)** 
- SEQUENCE OF OPERATION
- INSTRUCTION MANUAL
- MODEL NUMBER SELECTION GUIDE

**ELECTRIC FIRE PUMP
CONTROLLERS
AUTOTRANSFORMER
STARTING**

FireCat[®]

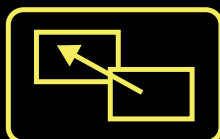

MAIN
MENU

 


ENTER



 
EXIT
PROGRAM

MENU


- BROCHURE
- PRODUCT DESCRIPTION SHEET
- DRAWINGS
- SUBMITTAL PACKAGES
- SPECIFICATIONS (pdf / word 
- **SEQUENCE OF OPERATION**
- INSTRUCTION MANUAL
- MODEL NUMBER SELECTION GUIDE

**ELECTRIC FIRE PUMP
CONTROLLERS
AUTOTRANSFORMER
STARTING**

FireCat[®]

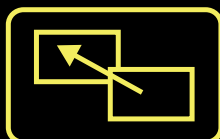

MAIN
MENU

 


ENTER



 
EXIT
PROGRAM

MENU


- BROCHURE
- PRODUCT DESCRIPTION SHEET
- DRAWINGS
- SUBMITTAL PACKAGES
- SPECIFICATIONS (pdf / word 
- SEQUENCE OF OPERATION
- **INSTRUCTION MANUAL**
- MODEL NUMBER SELECTION GUIDE

**ELECTRIC FIRE PUMP
CONTROLLERS
AUTOTRANSFORMER
STARTING**

FireCat[®]

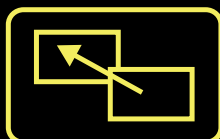

MAIN
MENU

 


ENTER



 
EXIT
PROGRAM

MENU


- BROCHURE
- PRODUCT DESCRIPTION SHEET
- DRAWINGS
- SUBMITTAL PACKAGES
- SPECIFICATIONS (pdf / word )
- SEQUENCE OF OPERATION
- INSTRUCTION MANUAL
- **MODEL NUMBER SELECTION GUIDE**

**ELECTRIC FIRE PUMP
CONTROLLERS
DIGITAL SOFT
START/STOP**

FireCat[®]

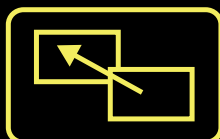

MAIN
MENU

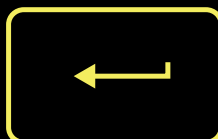 


ENTER



 
EXIT
PROGRAM

MENU


- **BROCHURE**
- PRODUCT DESCRIPTION SHEET
- DRAWINGS
- SUBMITTAL PACKAGES
- SPECIFICATIONS (pdf / word )
- SEQUENCE OF OPERATION
- INSTRUCTION MANUAL
- MODEL NUMBER SELECTION GUIDE

**ELECTRIC FIRE PUMP
CONTROLLERS
DIGITAL SOFT
START/STOP**

FireCat[®]

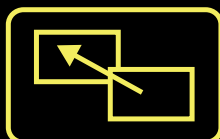

MAIN
MENU

 


ENTER



 
EXIT
PROGRAM

MENU


- BROCHURE
- **PRODUCT DESCRIPTION SHEET**
- DRAWINGS
- SUBMITTAL PACKAGES
- SPECIFICATIONS (pdf / word )
- SEQUENCE OF OPERATION
- INSTRUCTION MANUAL
- MODEL NUMBER SELECTION GUIDE

**ELECTRIC FIRE PUMP
CONTROLLERS
DIGITAL SOFT
START/STOP**

FireCat[®]

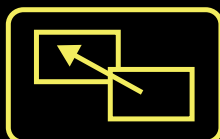

MAIN
MENU

 


ENTER



 
EXIT
PROGRAM

MENU


- BROCHURE
- PRODUCT DESCRIPTION SHEET
- **DRAWINGS**
- SUBMITTAL PACKAGES
- SPECIFICATIONS (pdf / word )
- SEQUENCE OF OPERATION
- INSTRUCTION MANUAL
- MODEL NUMBER SELECTION GUIDE

**ELECTRIC FIRE PUMP
CONTROLLERS
DIGITAL SOFT
START/STOP**

FireCat[®]

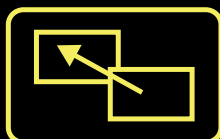

MAIN
MENU

 


ENTER



 
EXIT
PROGRAM

MENU


- BROCHURE
- PRODUCT DESCRIPTION SHEET
- DRAWINGS
- **SUBMITTAL PACKAGES**
- SPECIFICATIONS (pdf / word )
- SEQUENCE OF OPERATION
- INSTRUCTION MANUAL
- MODEL NUMBER SELECTION GUIDE

**ELECTRIC FIRE PUMP
CONTROLLERS
DIGITAL SOFT
START/STOP**

FireCat[®]

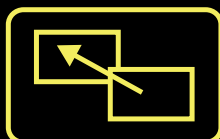

MAIN
MENU

 


ENTER



 
EXIT
PROGRAM

MENU


- BROCHURE
- PRODUCT DESCRIPTION SHEET
- DRAWINGS
- SUBMITTAL PACKAGES
- **SPECIFICATIONS (pdf / word)** 
- SEQUENCE OF OPERATION
- INSTRUCTION MANUAL
- MODEL NUMBER SELECTION GUIDE

**ELECTRIC FIRE PUMP
CONTROLLERS
DIGITAL SOFT
START/STOP**

FireCat[®]

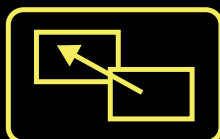

MAIN
MENU

 


ENTER



 
EXIT
PROGRAM

MENU


- BROCHURE
- PRODUCT DESCRIPTION SHEET
- DRAWINGS
- SUBMITTAL PACKAGES
- SPECIFICATIONS (pdf / word 
- **SEQUENCE OF OPERATION**
- INSTRUCTION MANUAL
- MODEL NUMBER SELECTION GUIDE

**ELECTRIC FIRE PUMP
CONTROLLERS
DIGITAL SOFT
START/STOP**

FireCat[®]

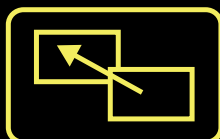

MAIN
MENU

 


ENTER



 
EXIT
PROGRAM

MENU


- BROCHURE
- PRODUCT DESCRIPTION SHEET
- DRAWINGS
- SUBMITTAL PACKAGES
- SPECIFICATIONS (pdf / word )
- SEQUENCE OF OPERATION
- **INSTRUCTION MANUAL**
- MODEL NUMBER SELECTION GUIDE

**ELECTRIC FIRE PUMP
CONTROLLERS
DIGITAL SOFT
START/STOP**

FireCat[®]

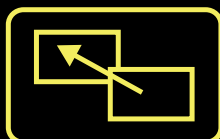

MAIN
MENU

 


ENTER



 
EXIT
PROGRAM

MENU


- BROCHURE
- PRODUCT DESCRIPTION SHEET
- DRAWINGS
- SUBMITTAL PACKAGES
- SPECIFICATIONS (pdf / word )
- SEQUENCE OF OPERATION
- INSTRUCTION MANUAL
- **MODEL NUMBER SELECTION GUIDE**

**ELECTRIC FIRE PUMP
CONTROLLERS
VARIBABLE SPEED
CONTROL**

FireCat[®]

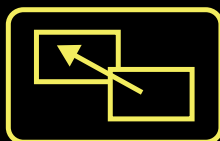

MAIN
MENU

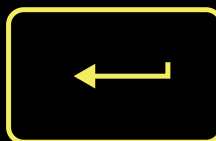 


ENTER



 
EXIT
PROGRAM

MENU


- **BROCHURE**
- PRODUCT DESCRIPTION SHEET
- DRAWINGS
- SUBMITTAL PACKAGES
- SPECIFICATIONS (pdf / word )
- SEQUENCE OF OPERATION
- INSTRUCTION MANUAL
- MODEL NUMBER SELECTION GUIDE

**ELECTRIC FIRE PUMP
CONTROLLERS
VARIBABLE SPEED
CONTROL**

FireCat[®]

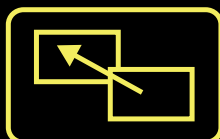

MAIN
MENU

 


ENTER



 
EXIT
PROGRAM

MENU


- BROCHURE
- **PRODUCT DESCRIPTION SHEET**
- DRAWINGS
- SUBMITTAL PACKAGES
- SPECIFICATIONS (pdf / word )
- SEQUENCE OF OPERATION
- INSTRUCTION MANUAL
- MODEL NUMBER SELECTION GUIDE

**ELECTRIC FIRE PUMP
CONTROLLERS
VARIBABLE SPEED
CONTROL**

FireCat[®]

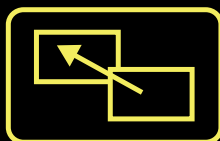

MAIN
MENU

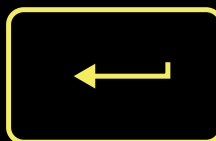 


ENTER



 
EXIT
PROGRAM

MENU


- BROCHURE
- PRODUCT DESCRIPTION SHEET
- **DRAWINGS**
- SUBMITTAL PACKAGES
- SPECIFICATIONS (pdf / word )
- SEQUENCE OF OPERATION
- INSTRUCTION MANUAL
- MODEL NUMBER SELECTION GUIDE

**ELECTRIC FIRE PUMP
CONTROLLERS
VARIBABLE SPEED
CONTROL**

FireCat[®]

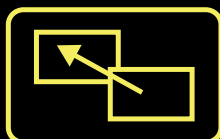

MAIN
MENU

 


ENTER



 
EXIT
PROGRAM

MENU


- BROCHURE
- PRODUCT DESCRIPTION SHEET
- DRAWINGS
- **SUBMITTAL PACKAGES**
- SPECIFICATIONS (pdf / word )
- SEQUENCE OF OPERATION
- INSTRUCTION MANUAL
- MODEL NUMBER SELECTION GUIDE

**ELECTRIC FIRE PUMP
CONTROLLERS
VARIBABLE SPEED
CONTROL**

FireCat[®]

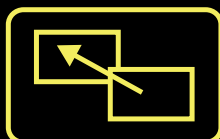

MAIN
MENU

 


ENTER



 
EXIT
PROGRAM

MENU


- BROCHURE
- PRODUCT DESCRIPTION SHEET
- DRAWINGS
- SUBMITTAL PACKAGES
- **SPECIFICATIONS (pdf / word)** 
- SEQUENCE OF OPERATION
- INSTRUCTION MANUAL
- MODEL NUMBER SELECTION GUIDE

**ELECTRIC FIRE PUMP
CONTROLLERS
VARIBABLE SPEED
CONTROL**

FireCat[®]

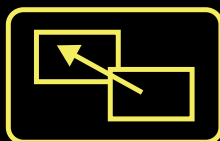

MAIN
MENU

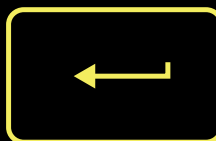 


ENTER



 
EXIT
PROGRAM

MENU


- BROCHURE
- PRODUCT DESCRIPTION SHEET
- DRAWINGS
- SUBMITTAL PACKAGES
- SPECIFICATIONS (pdf / word )
- **SEQUENCE OF OPERATION**
- INSTRUCTION MANUAL
- MODEL NUMBER SELECTION GUIDE

**ELECTRIC FIRE PUMP
CONTROLLERS
VARIBABLE SPEED
CONTROL**

FireCat[®]

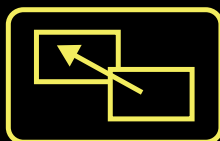

MAIN
MENU

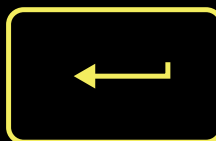 


ENTER



 
EXIT
PROGRAM

MENU


- BROCHURE
- PRODUCT DESCRIPTION SHEET
- DRAWINGS
- SUBMITTAL PACKAGES
- SPECIFICATIONS (pdf / word )
- SEQUENCE OF OPERATION
- **INSTRUCTION MANUAL**
- MODEL NUMBER SELECTION GUIDE

**ELECTRIC FIRE PUMP
CONTROLLERS
VARIBABLE SPEED
CONTROL**

FireCat[®]

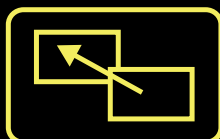

MAIN
MENU

 


ENTER



 
EXIT
PROGRAM

MENU


- BROCHURE
- PRODUCT DESCRIPTION SHEET
- DRAWINGS
- SUBMITTAL PACKAGES
- SPECIFICATIONS (pdf / word )
- SEQUENCE OF OPERATION
- INSTRUCTION MANUAL
- **MODEL NUMBER SELECTION GUIDE**

**Jockey Pump
Controllers**
Select item to open.
(Documents open in new
window)

FireCat[®]

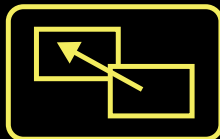

MAIN
MENU

 


ENTER



 
EXIT
PROGRAM

MENU



- **BROCHURE**
- PRODUCT DESCRIPTION SHEET
- DRAWINGS
- SUBMITTAL PACKAGE
- SPECIFICATIONS (pdf / word )
- INSTRUCTIONS
- MODEL NUMBER SELECTION GUIDE

**Jockey Pump
Controllers**
Select item to open.
(Documents open in new
window)

FireCat[®]

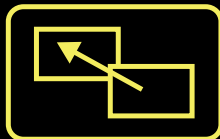

MAIN
MENU

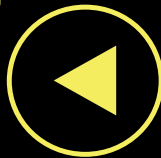  


ENTER



 
EXIT
PROGRAM

MENU


- BROCHURE
- **PRODUCT DESCRIPTION SHEET**
- DRAWINGS
- SUBMITTAL PACKAGE
- SPECIFICATIONS (pdf / word )
- INSTRUCTIONS
- MODEL NUMBER SELECTION GUIDE

**Jockey Pump
Controllers**
Select item to open.
(Documents open in new
window)

FireCat[®]

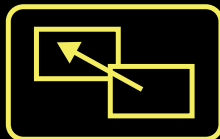

MAIN
MENU

 


ENTER



 
EXIT
PROGRAM

MENU


- BROCHURE
- PRODUCT DESCRIPTION SHEET
- **DRAWINGS**
- SUBMITTAL PACKAGE
- SPECIFICATIONS (pdf / word )
- INSTRUCTIONS
- MODEL NUMBER SELECTION GUIDE

**Jockey Pump
Controllers**
Select item to open.
(Documents open in new
window)

FireCat[®]

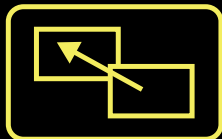

MAIN
MENU

 


ENTER



 
EXIT
PROGRAM

MENU


- BROCHURE
- PRODUCT DESCRIPTION SHEET
- DRAWINGS
- **SUBMITTAL PACKAGE**
- SPECIFICATIONS (pdf / word 
- INSTRUCTIONS
- MODEL NUMBER SELECTION GUIDE

**Jockey Pump
Controllers**
Select item to open.
(Documents open in new
window)

FireCat[®]

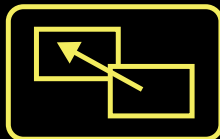

MAIN
MENU

 


ENTER



 
EXIT
PROGRAM

MENU


- BROCHURE
- PRODUCT DESCRIPTION SHEET
- DRAWINGS
- SUBMITTAL PACKAGE
- **SPECIFICATIONS** (pdf / word )
- INSTRUCTIONS
- MODEL NUMBER SELECTION GUIDE

**Jockey Pump
Controllers**
Select item to open.
(Documents open in new
window)

FireCat[®]

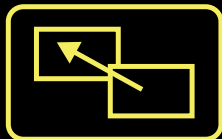

MAIN
MENU

 


ENTER



 
EXIT
PROGRAM

MENU


- BROCHURE
- PRODUCT DESCRIPTION SHEET
- DRAWINGS
- SUBMITTAL PACKAGE
- SPECIFICATIONS (pdf / word )
- **INSTRUCTIONS**
- MODEL NUMBER SELECTION GUIDE

**Jockey Pump
Controllers**
Select item to open.
(Documents open in new
window)

FireCat[®]

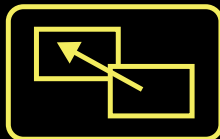

MAIN
MENU

 


ENTER



 
EXIT
PROGRAM

MENU


- BROCHURE
- PRODUCT DESCRIPTION SHEET
- DRAWINGS
- SUBMITTAL PACKAGE
- SPECIFICATIONS (pdf / word )
- INSTRUCTIONS
- **MODEL NUMBER SELECTION GUIDE**

**DIESEL ENGINE
FIRE PUMP
CONTROLLERS**
Select type of controller
to view.

FireCat[®]

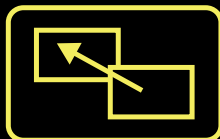

MAIN
MENU

 

ENTER



 
EXIT
PROGRAM

MENU



- 1100J STANDARD CONTROLLER
- 1100H CONTROLLER FOR C1, D2 APPLICATIONS

**DIESEL ENGINE
FIRE PUMP
CONTROLLERS**
Select type of controller
to view.

FireCat[®]

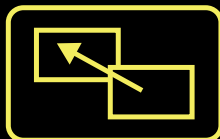

MAIN
MENU

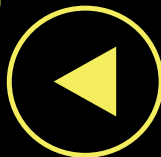  

ENTER



EXIT
PROGRAM

 
MENU

- 1100J STANDARD CONTROLLER
- 1100H CONTROLLER FOR C1, D2 APPLICATIONS



DIESEL ENGINE FIRE PUMP CONTROLLERS

STANDARD

FireCat®

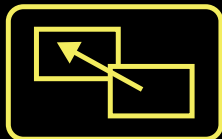

MAIN
MENU

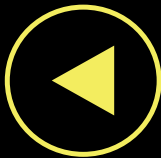  


ENTER



EXIT
PROGRAM

 
MENU

- **BROCHURE**
- PRODUCT DESCRIPTION SHEET
- DRAWINGS
- SUBMITTAL PACKAGES
- SPECIFICATIONS (pdf / word 
- SEQUENCE OF OPERATION
- INSTRUCTION MANUAL
- MODEL NUMBER SELECTION GUIDE


DIESEL ENGINE FIRE PUMP CONTROLLERS

STANDARD

FireCat®

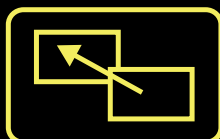

MAIN
MENU

 


ENTER



EXIT
PROGRAM

 
MENU

- BROCHURE
- **PRODUCT DESCRIPTION SHEET**
- DRAWINGS
- SUBMITTAL PACKAGES
- SPECIFICATIONS (pdf / word )
- SEQUENCE OF OPERATION
- INSTRUCTION MANUAL
- MODEL NUMBER SELECTION GUIDE


DIESEL ENGINE FIRE PUMP CONTROLLERS

STANDARD

FireCat®

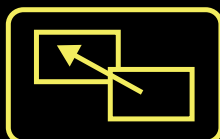

MAIN
MENU

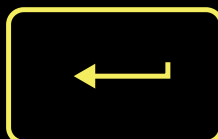 


ENTER



EXIT
PROGRAM

 
MENU

- BROCHURE
- PRODUCT DESCRIPTION SHEET
- **DRAWINGS**
- SUBMITTAL PACKAGES
- SPECIFICATIONS (pdf / word )
- SEQUENCE OF OPERATION
- INSTRUCTION MANUAL
- MODEL NUMBER SELECTION GUIDE


DIESEL ENGINE FIRE PUMP CONTROLLERS

STANDARD

FireCat®

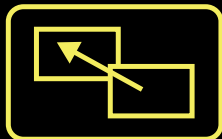

MAIN
MENU

 


ENTER



EXIT
PROGRAM

 
MENU

- BROCHURE
- PRODUCT DESCRIPTION SHEET
- DRAWINGS
- SUBMITTAL PACKAGES
- SPECIFICATIONS (pdf / word )
- SEQUENCE OF OPERATION
- INSTRUCTION MANUAL
- MODEL NUMBER SELECTION GUIDE


DIESEL ENGINE FIRE PUMP CONTROLLERS

STANDARD

FireCat®

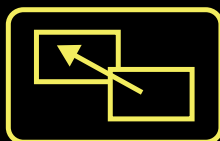

MAIN
MENU

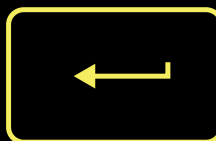 


ENTER



EXIT
PROGRAM

 
MENU

- BROCHURE
- PRODUCT DESCRIPTION SHEET
- DRAWINGS
- SUBMITTAL PACKAGES
- SPECIFICATIONS (pdf / word )
- SEQUENCE OF OPERATION
- INSTRUCTION MANUAL
- MODEL NUMBER SELECTION GUIDE



DIESEL ENGINE FIRE PUMP CONTROLLERS

STANDARD

FireCat®

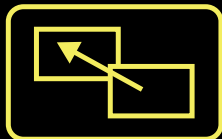

MAIN
MENU

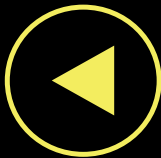  


ENTER



EXIT
PROGRAM

 
MENU

- BROCHURE
- PRODUCT DESCRIPTION SHEET
- DRAWINGS
- SUBMITTAL PACKAGES
- SPECIFICATIONS (pdf / word 
- **SEQUENCE OF OPERATION**
- INSTRUCTION MANUAL
- MODEL NUMBER SELECTION GUIDE


DIESEL ENGINE FIRE PUMP CONTROLLERS

STANDARD

FireCat®

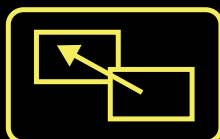

MAIN
MENU

 


ENTER



EXIT
PROGRAM

 
MENU

- BROCHURE
- PRODUCT DESCRIPTION SHEET
- DRAWINGS
- SUBMITTAL PACKAGES
- SPECIFICATIONS (pdf / word )
- SEQUENCE OF OPERATION
- **INSTRUCTION MANUAL**
- MODEL NUMBER SELECTION GUIDE


DIESEL ENGINE FIRE PUMP CONTROLLERS

STANDARD

FireCat®

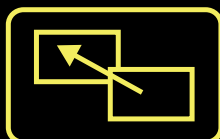

MAIN
MENU

 


ENTER



 
EXIT
PROGRAM

MENU



- BROCHURE
- PRODUCT DESCRIPTION SHEET
- DRAWINGS
- SUBMITTAL PACKAGES
- SPECIFICATIONS (pdf / word )
- SEQUENCE OF OPERATION
- INSTRUCTION MANUAL
- **MODEL NUMBER SELECTION GUIDE**

HIGH VOLTAGE FIRE PUMP CONTROLLERS

FireCat®

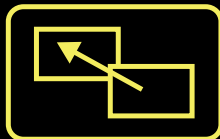

MAIN
MENU

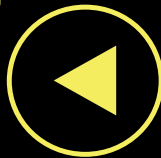  


ENTER



 
EXIT
PROGRAM

MENU


- BROCHURE
- PRODUCT DESCRIPTION SHEET
- DRAWINGS
- SUBMITTAL PACKAGES
- SPECIFICATIONS (pdf / word )
- SEQUENCE OF OPERATION
- INSTRUCTION MANUAL
- MODEL NUMBER SELECTION GUIDE

HIGH VOLTAGE FIRE PUMP CONTROLLERS

FireCat®

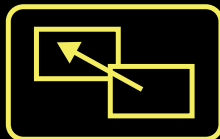

MAIN
MENU

 


ENTER



 
EXIT
PROGRAM

MENU


- BROCHURE
- **PRODUCT DESCRIPTION SHEET**
- DRAWINGS
- SUBMITTAL PACKAGES
- SPECIFICATIONS (pdf / word )
- SEQUENCE OF OPERATION
- INSTRUCTION MANUAL
- MODEL NUMBER SELECTION GUIDE

HIGH VOLTAGE FIRE PUMP CONTROLLERS

FireCat®

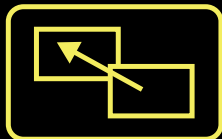

MAIN
MENU

 


ENTER




EXIT
PROGRAM

 MENU


- BROCHURE
- PRODUCT DESCRIPTION SHEET
- **DRAWINGS**
- SUBMITTAL PACKAGES
- SPECIFICATIONS (pdf / word )
- SEQUENCE OF OPERATION
- INSTRUCTION MANUAL
- MODEL NUMBER SELECTION GUIDE

HIGH VOLTAGE FIRE PUMP CONTROLLERS

 FireCat®

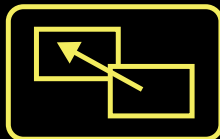

MAIN
MENU

 


ENTER



 
EXIT
PROGRAM

MENU


- BROCHURE
- PRODUCT DESCRIPTION SHEET
- DRAWINGS
- SUBMITTAL PACKAGES
- SPECIFICATIONS (pdf / word )
- SEQUENCE OF OPERATION
- INSTRUCTION MANUAL
- MODEL NUMBER SELECTION GUIDE

HIGH VOLTAGE FIRE PUMP CONTROLLERS

FireCat®

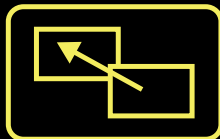

MAIN
MENU

 


ENTER



 
EXIT
PROGRAM

MENU


- BROCHURE
- PRODUCT DESCRIPTION SHEET
- DRAWINGS
- SUBMITTAL PACKAGES
- SPECIFICATIONS (pdf / word )
- SEQUENCE OF OPERATION
- INSTRUCTION MANUAL
- MODEL NUMBER SELECTION GUIDE

HIGH VOLTAGE FIRE PUMP CONTROLLERS

FireCat®

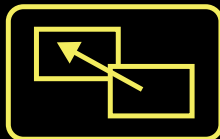

MAIN
MENU

 


ENTER




EXIT
PROGRAM

 MENU


- BROCHURE
- PRODUCT DESCRIPTION SHEET
- DRAWINGS
- SUBMITTAL PACKAGES
- SPECIFICATIONS (pdf / word 
- **SEQUENCE OF OPERATION**
- INSTRUCTION MANUAL
- MODEL NUMBER SELECTION GUIDE

HIGH VOLTAGE FIRE PUMP CONTROLLERS

 FireCat®

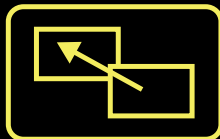

MAIN
MENU

 


ENTER



 
EXIT
PROGRAM

MENU


- BROCHURE
- PRODUCT DESCRIPTION SHEET
- DRAWINGS
- SUBMITTAL PACKAGES
- SPECIFICATIONS (pdf / word )
- SEQUENCE OF OPERATION
- **INSTRUCTION MANUAL**
- MODEL NUMBER SELECTION GUIDE

HIGH VOLTAGE FIRE PUMP CONTROLLERS

FireCat®

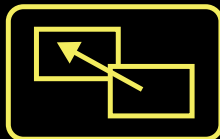

MAIN
MENU

 


ENTER



 
EXIT
PROGRAM

MENU


- BROCHURE
- PRODUCT DESCRIPTION SHEET
- DRAWINGS
- SUBMITTAL PACKAGES
- SPECIFICATIONS (pdf / word )
- SEQUENCE OF OPERATION
- INSTRUCTION MANUAL
- **MODEL NUMBER SELECTION GUIDE**

**ELECTRIC FIRE PUMP
CONTROLLERS
FULL VOLTAGE
STARTING**

FireCat[®]

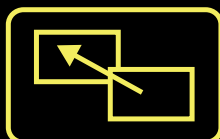

MAIN
MENU

 

ENTER



 
EXIT
PROGRAM

MENU


- **DIMENSIONAL DRAWINGS**
- WIRING SCHEMATIC
- WIRING SCHEMATIC W/ -TSA
(POWER TRANSFER SWITCH)
- FIELD CONNECTIONS
- FIELD CONNECTIONS W/-TSA
(POWER TRANSFER SWITCH)
- FIELD CONNECTIONS (LINE AND
MOTOR FIELD WIRE TERMINAL
CAPACITY)

**ELECTRIC FIRE PUMP
CONTROLLERS
FULL VOLTAGE
STARTING**

FireCat[®]

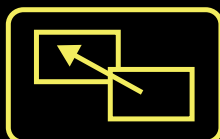

MAIN
MENU

 

ENTER



 
EXIT
PROGRAM

MENU


- DIMENSIONAL DRAWINGS
- **WIRING SCHEMATIC**
- WIRING SCHEMATIC W/ -TSA
(POWER TRANSFER SWITCH)
- FIELD CONNECTIONS
- FIELD CONNECTIONS W/-TSA
(POWER TRANSFER SWITCH)
- FIELD CONNECTIONS (LINE AND
MOTOR FIELD WIRE TERMINAL
CAPACITY)

**ELECTRIC FIRE PUMP
CONTROLLERS
FULL VOLTAGE
STARTING**

FireCat[®]

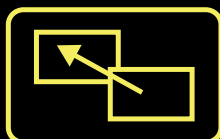

MAIN
MENU

 

ENTER



 
EXIT
PROGRAM

MENU


- DIMENSIONAL DRAWINGS
- WIRING SCHEMATIC
- **WIRING SCHEMATIC W/ -TSA
(POWER TRANSFER SWITCH)**
- FIELD CONNECTIONS
- FIELD CONNECTIONS W/-TSA
(POWER TRANSFER SWITCH)
- FIELD CONNECTIONS (LINE AND
MOTOR FIELD WIRE TERMINAL
CAPACITY)

**ELECTRIC FIRE PUMP
CONTROLLERS
FULL VOLTAGE
STARTING**

FireCat[®]

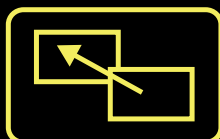

MAIN
MENU

 

ENTER



 
EXIT
PROGRAM

MENU


- DIMENSIONAL DRAWINGS
- WIRING SCHEMATIC
- WIRING SCHEMATIC W/ -TSA
(POWER TRANSFER SWITCH)
- **FIELD CONNECTIONS**
- FIELD CONNECTIONS W/-TSA
(POWER TRANSFER SWITCH)
- FIELD CONNECTIONS (LINE AND
MOTOR FIELD WIRE TERMINAL
CAPACITY)

**ELECTRIC FIRE PUMP
CONTROLLERS
FULL VOLTAGE
STARTING**

FireCat[®]

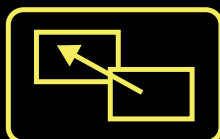

MAIN
MENU

 

ENTER



 
EXIT
PROGRAM

MENU


- DIMENSIONAL DRAWINGS
- WIRING SCHEMATIC
- WIRING SCHEMATIC W/ -TSA
(POWER TRANSFER SWITCH)
- FIELD CONNECTIONS
- **FIELD CONNECTIONS W/-TSA
(POWER TRANSFER SWITCH)**
- FIELD CONNECTIONS (LINE AND
MOTOR FIELD WIRE TERMINAL
CAPACITY)

**ELECTRIC FIRE PUMP
CONTROLLERS
FULL VOLTAGE
STARTING**

FireCat[®]

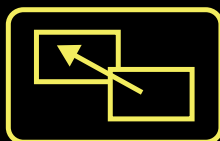

MAIN
MENU

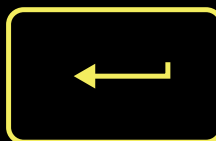 

ENTER



 
EXIT
PROGRAM

MENU


- DIMENSIONAL DRAWINGS
- WIRING SCHEMATIC
- WIRING SCHEMATIC W/ -TSA
(POWER TRANSFER SWITCH)
- FIELD CONNECTIONS
- FIELD CONNECTIONS W/-TSA
(POWER TRANSFER SWITCH)
- **FIELD CONNECTIONS (LINE AND
MOTOR FIELD WIRE TERMINAL
CAPACITY)**

**ELECTRIC FIRE PUMP
CONTROLLERS
FULL VOLTAGE
STARTING
(DIMENSIONAL DRAWINGS)**

FireCat[®]

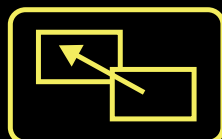

MAIN
MENU

 

ENTER



EXIT
PROGRAM

MENU

STANDARD CONTROLLERS


LINE VOLTAGE	HORSEPOWER RANGE		
200	3 - 60	75 - 100	125 - 250
208	3 - 60	75 - 100	125 - 250
220-240	3 - 60	75 - 100	125 - 300
380-415	3 - 100	125 - 150	200 - 500
440-480	3 - 150	200 - 250	300 - 600
550-600	3 - 150	200 - 300	- - -

**STANDARD CONTROLLERS W/-TSA
(POWER TRANSFER SWITCH)**


LINE VOLTAGE	HORSEPOWER RANGE		
200	3 - 60	75 - 100	125 - 250
208	3 - 60	75 - 100	125 - 250
220-240	3 - 60	75 - 100	125 - 300
380-415	3 - 100	125 - 150	200 - 500
440-480	3 - 150	200 - 250	300 - 600
550-600	3 - 150	200 - 300	- - -

**ELECTRIC FIRE PUMP
CONTROLLERS
FULL VOLTAGE
STARTING
(SUBMITTAL PACKAGES)**

 FireCat[®]

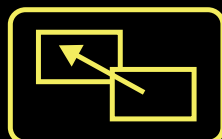

MAIN
MENU

 

ENTER



EXIT
PROGRAM

MENU

STANDARD CONTROLLERS


LINE VOLTAGE	HORSEPOWER RANGE		
200	3 - 60	75 - 100	125 - 250
208	3 - 60	75 - 100	125 - 250
220-240	3 - 60	75 - 100	125 - 300
380-415	3 - 100	125 - 150	200 - 500
440-480	3 - 150	200 - 250	300 - 600
550-600	3 - 150	200 - 300	- - -

**STANDARD CONTROLLERS W/-TSA
(POWER TRANSFER SWITCH)**


LINE VOLTAGE	HORSEPOWER RANGE		
200	3 - 60	75 - 100	125 - 250
208	3 - 60	75 - 100	125 - 250
220-240	3 - 60	75 - 100	125 - 300
380-415	3 - 100	125 - 150	200 - 500
440-480	3 - 150	200 - 250	300 - 600
550-600	3 - 150	200 - 300	- - -

**ELECTRIC FIRE PUMP
CONTROLLERS
PART WINDING
STARTING**

 FireCat[®]

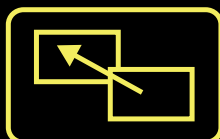

MAIN
MENU

 

ENTER



 
EXIT
PROGRAM

MENU


- **DIMENSIONAL DRAWINGS**
- WIRING SCHEMATIC
- WIRING SCHEMATIC W/-TSA
(POWER TRANSFER SWITCH)
- FIELD CONNECTIONS
- FIELD CONNECTIONS W/-TSA
(POWER TRANSFER SWITCH)
- FIELD CONNECTIONS (LINE AND
MOTOR FIELD WIRE TERMINAL
CAPACITY)

**ELECTRIC FIRE PUMP
CONTROLLERS
PART WINDING
STARTING**

FireCat[®]

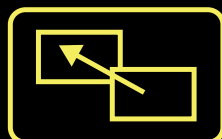

MAIN
MENU

 

ENTER



 
EXIT
PROGRAM

MENU


- DIMENSIONAL DRAWINGS
- **WIRING SCHEMATIC**
- WIRING SCHEMATIC W/-TSA
(POWER TRANSFER SWITCH)
- FIELD CONNECTIONS
- FIELD CONNECTIONS W/-TSA
(POWER TRANSFER SWITCH)
- FIELD CONNECTIONS (LINE AND
MOTOR FIELD WIRE TERMINAL
CAPACITY)

**ELECTRIC FIRE PUMP
CONTROLLERS
PART WINDING
STARTING**

FireCat[®]

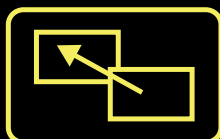

MAIN
MENU

 

ENTER



 
EXIT
PROGRAM

MENU


- DIMENSIONAL DRAWINGS
- WIRING SCHEMATIC
- **WIRING SCHEMATIC W/-TSA
(POWER TRANSFER SWITCH)**
- FIELD CONNECTIONS
- FIELD CONNECTIONS W/-TSA
(POWER TRANSFER SWITCH)
- FIELD CONNECTIONS (LINE AND
MOTOR FIELD WIRE TERMINAL
CAPACITY)

**ELECTRIC FIRE PUMP
CONTROLLERS
PART WINDING
STARTING**

FireCat[®]

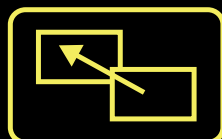

MAIN
MENU

 

ENTER



 
EXIT
PROGRAM

MENU


- DIMENSIONAL DRAWINGS
- WIRING SCHEMATIC
- WIRING SCHEMATIC W/-TSA
(POWER TRANSFER SWITCH)
- **FIELD CONNECTIONS**
- FIELD CONNECTIONS W/-TSA
(POWER TRANSFER SWITCH)
- FIELD CONNECTIONS (LINE AND
MOTOR FIELD WIRE TERMINAL
CAPACITY)

**ELECTRIC FIRE PUMP
CONTROLLERS
PART WINDING
STARTING**

FireCat[®]

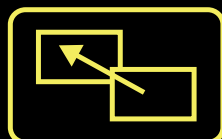

MAIN
MENU

 

ENTER



 
EXIT
PROGRAM

MENU


- DIMENSIONAL DRAWINGS
- WIRING SCHEMATIC
- WIRING SCHEMATIC W/-TSA
(POWER TRANSFER SWITCH)
- FIELD CONNECTIONS
- **FIELD CONNECTIONS W/-TSA
(POWER TRANSFER SWITCH)**
- FIELD CONNECTIONS (LINE AND
MOTOR FIELD WIRE TERMINAL
CAPACITY)

**ELECTRIC FIRE PUMP
CONTROLLERS
PART WINDING
STARTING**

FireCat[®]

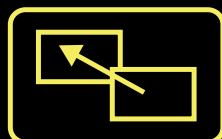

MAIN
MENU

 

ENTER



 
EXIT
PROGRAM

MENU


- DIMENSIONAL DRAWINGS
- WIRING SCHEMATIC
- WIRING SCHEMATIC W/-TSA
(POWER TRANSFER SWITCH)
- FIELD CONNECTIONS
- FIELD CONNECTIONS W/-TSA
(POWER TRANSFER SWITCH)
- **FIELD CONNECTIONS (LINE AND
MOTOR FIELD WIRE TERMINAL
CAPACITY)**

**ELECTRIC FIRE PUMP
CONTROLLERS
PART WINDING
STARTING
(DIMENSIONAL DRAWINGS)**

FireCat[®]

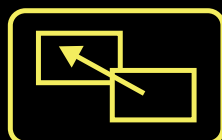

MAIN
MENU

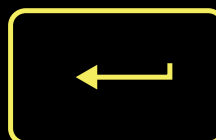 

ENTER



EXIT
PROGRAM

MENU

STANDARD CONTROLLERS


LINE VOLTAGE	HORSEPOWER RANGE		
200	3 - 60	75 - 100	125 - 250
208	3 - 60	75 - 100	125 - 250
220-240	3 - 60	75 - 100	125 - 300
380-415	3 - 100	125 - 150	200 - 500
440-480	3 - 150	200 - 250	300 - 600
550-600	3 - 150	200 - 300	350 - 500

**STANDARD CONTROLLERS W/-TSA
(POWER TRANSFER SWITCH)**


LINE VOLTAGE	HORSEPOWER RANGE		
200	3 - 60	75 - 100	125 - 250
208	3 - 60	75 - 100	125 - 250
220-240	3 - 60	75 - 100	125 - 300
380-415	3 - 100	125 - 150	200 - 500
440-480	3 - 150	200 - 250	300 - 600
550-600	3 - 150	200 - 300	350-500

**ELECTRIC FIRE PUMP
CONTROLLERS
PART WINDING
STARTING
(SUBMITTAL PACKAGES)**

 FireCat[®]

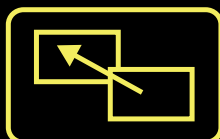

MAIN
MENU

 

ENTER



EXIT
PROGRAM

MENU

STANDARD CONTROLLERS


LINE VOLTAGE	HORSEPOWER RANGE		
200	3 - 60	75 - 100	125 - 250
208	3 - 60	75 - 100	125 - 250
220-240	3 - 60	75 - 100	125 - 300
380-415	3 - 100	125 - 150	200 - 500
440-480	3 - 150	200 - 250	300 - 600
550-600	3 - 150	200 - 300	350 - 500

**STANDARD CONTROLLERS W/-TSA
(POWER TRANSFER SWITCH)**


LINE VOLTAGE	HORSEPOWER RANGE		
200	3 - 60	75 - 100	125 - 250
208	3 - 60	75 - 100	125 - 250
220-240	3 - 60	75 - 100	125 - 300
380-415	3 - 100	125 - 150	200 - 500
440-480	3 - 150	200 - 250	300 - 600
550-600	3 - 150	200 - 300	350-500

**ELECTRIC FIRE PUMP
CONTROLLERS
WYE-DELTA OPEN
TRANSITION STARTING**

 FireCat[®]

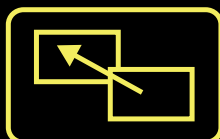

MAIN
MENU

 

ENTER



 
EXIT
PROGRAM

MENU


- **DIMENSIONAL DRAWINGS**
- WIRING SCHEMATIC
- WIRING SCHEMATIC W/-TSA
(POWER TRANSFER SWITCH)
- FIELD CONNECTIONS
- FIELD CONNECTIONS W/-TSA
(POWER TRANSFER SWITCH)
- FIELD CONNECTIONS (LINE AND
MOTOR FIELD WIRE TERMINAL
CAPACITY)

**ELECTRIC FIRE PUMP
CONTROLLERS
WYE-DELTA OPEN
TRANSITION STARTING**

FireCat[®]

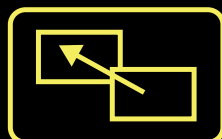

MAIN
MENU

 

ENTER



 
EXIT
PROGRAM

MENU


- DIMENSIONAL DRAWINGS
- **WIRING SCHEMATIC**
- WIRING SCHEMATIC W/-TSA
(POWER TRANSFER SWITCH)
- FIELD CONNECTIONS
- FIELD CONNECTIONS W/-TSA
(POWER TRANSFER SWITCH)
- FIELD CONNECTIONS (LINE AND
MOTOR FIELD WIRE TERMINAL
CAPACITY)

**ELECTRIC FIRE PUMP
CONTROLLERS
WYE-DELTA OPEN
TRANSITION STARTING**

FireCat[®]

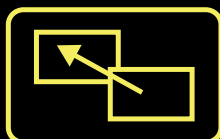

MAIN
MENU

 

ENTER



 
EXIT
PROGRAM

MENU


- DIMENSIONAL DRAWINGS
- WIRING SCHEMATIC
- **WIRING SCHEMATIC W/-TSA
(POWER TRANSFER SWITCH)**
- FIELD CONNECTIONS
- FIELD CONNECTIONS W/-TSA
(POWER TRANSFER SWITCH)
- FIELD CONNECTIONS (LINE AND
MOTOR FIELD WIRE TERMINAL
CAPACITY)

**ELECTRIC FIRE PUMP
CONTROLLERS
WYE-DELTA OPEN
TRANSITION STARTING**

FireCat[®]

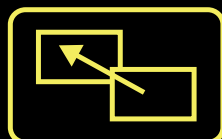

MAIN
MENU

 

ENTER



 
EXIT
PROGRAM

MENU


- DIMENSIONAL DRAWINGS
- WIRING SCHEMATIC
- WIRING SCHEMATIC W/-TSA
(POWER TRANSFER SWITCH)
- **FIELD CONNECTIONS**
- FIELD CONNECTIONS W/-TSA
(POWER TRANSFER SWITCH)
- FIELD CONNECTIONS (LINE AND
MOTOR FIELD WIRE TERMINAL
CAPACITY)

**ELECTRIC FIRE PUMP
CONTROLLERS
WYE-DELTA OPEN
TRANSITION STARTING**

FireCat[®]

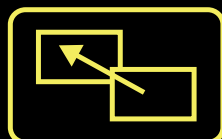

MAIN
MENU

 

ENTER



 
EXIT
PROGRAM

MENU


- DIMENSIONAL DRAWINGS
- WIRING SCHEMATIC
- WIRING SCHEMATIC W/-TSA
(POWER TRANSFER SWITCH)
- FIELD CONNECTIONS
- **FIELD CONNECTIONS W/-TSA
(POWER TRANSFER SWITCH)**
- FIELD CONNECTIONS (LINE AND
MOTOR FIELD WIRE TERMINAL
CAPACITY)

**ELECTRIC FIRE PUMP
CONTROLLERS
WYE-DELTA OPEN
TRANSITION STARTING**

FireCat[®]

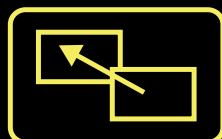

MAIN
MENU

 

ENTER



 
EXIT
PROGRAM

MENU


- DIMENSIONAL DRAWINGS
- WIRING SCHEMATIC
- WIRING SCHEMATIC W/-TSA
(POWER TRANSFER SWITCH)
- FIELD CONNECTIONS
- FIELD CONNECTIONS W/-TSA
(POWER TRANSFER SWITCH)
- **FIELD CONNECTIONS (LINE AND
MOTOR FIELD WIRE TERMINAL
CAPACITY)**

**ELECTRIC FIRE PUMP
CONTROLLERS
WYE-DELTA OPEN
TRANSITION STARTING
(DIMENSIONAL DRAWINGS)**

FireCat[®]

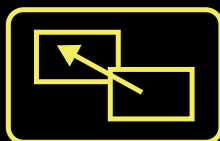

MAIN
MENU

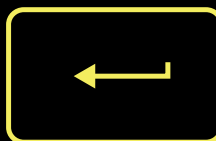 

ENTER



EXIT
PROGRAM

MENU

STANDARD CONTROLLERS


LINE VOLTAGE	HORSEPOWER RANGE		
200	3 - 60	75 - 100	125 - 250
208	3 - 60	75 - 100	125 - 250
220-240	3 - 60	75 - 100	125 - 300
380-415	3 - 100	125 - 150	200 - 500
440-480	3 - 150	200 - 250	300 - 600
550-600	3 - 150	200 - 300	350 - 500

**STANDARD CONTROLLERS W/-TSA
(POWER TRANSFER SWITCH)**


LINE VOLTAGE	HORSEPOWER RANGE		
200	3 - 60	75 - 100	125 - 250
208	3 - 60	75 - 100	125 - 250
220-240	3 - 60	75 - 100	125 - 300
380-415	3 - 100	125 - 150	200 - 500
440-480	3 - 150	200 - 250	300 - 600
550-600	3 - 150	200 - 300	350 - 500

**ELECTRIC FIRE PUMP
CONTROLLERS
WYE-DELTA OPEN
TRANSITION STARTING
(SUBMITTAL PACKAGES)**

 
FireCat[®]

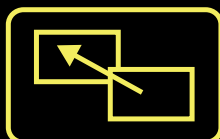

MAIN
MENU

 

ENTER

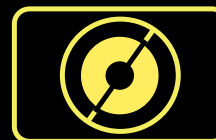 

EXIT
PROGRAM

MENU

STANDARD CONTROLLERS


LINE VOLTAGE	HORSEPOWER RANGE		
200	3 - 60	75 - 100	125 - 250
208	3 - 60	75 - 100	125 - 250
220-240	3 - 60	75 - 100	125 - 300
380-415	3 - 100	125 - 150	200 - 500
440-480	3 - 150	200 - 250	300 - 600
550-600	3 - 150	200 - 300	350 - 500

**STANDARD CONTROLLERS W/-TSA
(POWER TRANSFER SWITCH)**


LINE VOLTAGE	HORSEPOWER RANGE		
200	3 - 60	75 - 100	125 - 250
208	3 - 60	75 - 100	125 - 250
220-240	3 - 60	75 - 100	125 - 300
380-415	3 - 100	125 - 150	200 - 500
440-480	3 - 150	200 - 250	300 - 600
550-600	3 - 150	200 - 300	350 - 500

**ELECTRIC FIRE PUMP
CONTROLLERS
WYE-DELTA CLOSED
TRANSITION STARTING**

 FireCat[®]

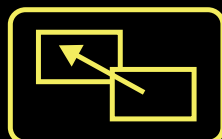

MAIN
MENU

 

ENTER



 
EXIT
PROGRAM

MENU


- **DIMENSIONAL DRAWINGS**
- WIRING SCHEMATIC
- WIRING SCHEMATIC W/-TSA
(POWER TRANSFER SWITCH)
- FIELD CONNECTIONS
- FIELD CONNECTIONS W/-TSA
(POWER TRANSFER SWITCH)
- FIELD CONNECTIONS (LINE AND
MOTOR FIELD WIRE TERMINAL
CAPACITY)

**ELECTRIC FIRE PUMP
CONTROLLERS
WYE-DELTA CLOSED
TRANSITION STARTING**

FireCat[®]

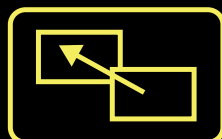

MAIN
MENU

 

ENTER



 
EXIT
PROGRAM

MENU


- DIMENSIONAL DRAWINGS
- **WIRING SCHEMATIC**
- WIRING SCHEMATIC W/-TSA
(POWER TRANSFER SWITCH)
- FIELD CONNECTIONS
- FIELD CONNECTIONS W/-TSA
(POWER TRANSFER SWITCH)
- FIELD CONNECTIONS (LINE AND
MOTOR FIELD WIRE TERMINAL
CAPACITY)

**ELECTRIC FIRE PUMP
CONTROLLERS
WYE-DELTA CLOSED
TRANSITION STARTING**

FireCat[®]

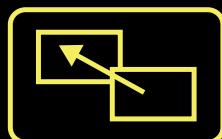

MAIN
MENU

 

ENTER



 
EXIT
PROGRAM

MENU


- DIMENSIONAL DRAWINGS
- WIRING SCHEMATIC
- **WIRING SCHEMATIC W/-TSA
(POWER TRANSFER SWITCH)**
- FIELD CONNECTIONS
- FIELD CONNECTIONS W/-TSA
(POWER TRANSFER SWITCH)
- FIELD CONNECTIONS (LINE AND
MOTOR FIELD WIRE TERMINAL
CAPACITY)

**ELECTRIC FIRE PUMP
CONTROLLERS
WYE-DELTA CLOSED
TRANSITION STARTING**

FireCat[®]

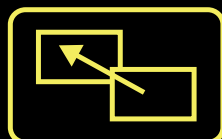

MAIN
MENU

 

ENTER



 
EXIT
PROGRAM

MENU


- DIMENSIONAL DRAWINGS
- WIRING SCHEMATIC
- WIRING SCHEMATIC W/-TSA
(POWER TRANSFER SWITCH)
- **FIELD CONNECTIONS**
- FIELD CONNECTIONS W/-TSA
(POWER TRANSFER SWITCH)
- FIELD CONNECTIONS (LINE AND
MOTOR FIELD WIRE TERMINAL
CAPACITY)

**ELECTRIC FIRE PUMP
CONTROLLERS
WYE-DELTA CLOSED
TRANSITION STARTING**

FireCat[®]

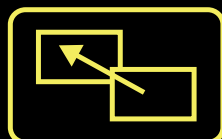

MAIN
MENU

 

ENTER



 
EXIT
PROGRAM

MENU


- DIMENSIONAL DRAWINGS
- WIRING SCHEMATIC
- WIRING SCHEMATIC W/-TSA
(POWER TRANSFER SWITCH)
- FIELD CONNECTIONS
- **FIELD CONNECTIONS W/-TSA
(POWER TRANSFER SWITCH)**
- FIELD CONNECTIONS (LINE AND
MOTOR FIELD WIRE TERMINAL
CAPACITY)

**ELECTRIC FIRE PUMP
CONTROLLERS
WYE-DELTA CLOSED
TRANSITION STARTING**

FireCat[®]

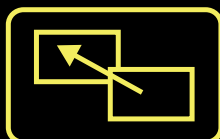

MAIN
MENU

 

ENTER



 
EXIT
PROGRAM

MENU


- DIMENSIONAL DRAWINGS
- WIRING SCHEMATIC
- WIRING SCHEMATIC W/-TSA
(POWER TRANSFER SWITCH)
- FIELD CONNECTIONS
- FIELD CONNECTIONS W/-TSA
(POWER TRANSFER SWITCH)
- **FIELD CONNECTIONS (LINE AND
MOTOR FIELD WIRE TERMINAL
CAPACITY)**

**ELECTRIC FIRE PUMP
CONTROLLERS
WYE-DELTA CLOSED
TRANSITION STARTING
(DIMENSIONAL DRAWINGS)**

FireCat[®]

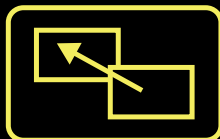

MAIN
MENU

 

ENTER



EXIT
PROGRAM

MENU

STANDARD CONTROLLERS


LINE VOLTAGE	HORSEPOWER RANGE		
200	3 - 60	75 - 100	125 - 250
208	3 - 60	75 - 100	125 - 250
220-240	3 - 60	75 - 100	125 - 300
380-415	3 - 100	125 - 150	200 - 500
440-480	3 - 150	200 - 250	300 - 600
550-600	3 - 150	200 - 300	350 - 500

**STANDARD CONTROLLERS W/-TSA
(POWER TRANSFER SWITCH)**



LINE VOLTAGE	HORSEPOWER RANGE		
200	3 - 60	75 - 100	125 - 250
208	3 - 60	75 - 100	125 - 250
220-240	3 - 60	75 - 100	125 - 300
380-415	3 - 100	125 - 150	200 - 500
440-480	3 - 150	200 - 250	300 - 600
550-600	3 - 150	200 - 300	350 - 500

**ELECTRIC FIRE PUMP
CONTROLLERS
WYE-DELTA CLOSED
TRANSITION STARTING
(SUBMITTAL PACKAGES)**

 FireCat[®]

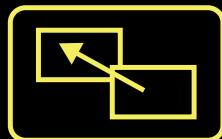

MAIN
MENU

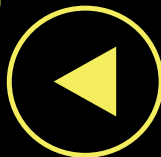  

ENTER



EXIT
PROGRAM

MENU

STANDARD CONTROLLERS


LINE VOLTAGE	HORSEPOWER RANGE		
200	3 - 60	75 - 100	125 - 250
208	3 - 60	75 - 100	125 - 250
220-240	3 - 60	75 - 100	125 - 300
380-415	3 - 100	125 - 150	200 - 500
440-480	3 - 150	200 - 250	300 - 600
550-600	3 - 150	200 - 300	350 - 500

**STANDARD CONTROLLERS W/-TSA
(POWER TRANSFER SWITCH)**


LINE VOLTAGE	HORSEPOWER RANGE		
200	3 - 60	75 - 100	125 - 250
208	3 - 60	75 - 100	125 - 250
220-240	3 - 60	75 - 100	125 - 300
380-415	3 - 100	125 - 150	200 - 500
440-480	3 - 150	200 - 250	300 - 600
550-600	3 - 150	200 - 300	350 - 500

**ELECTRIC FIRE PUMP
CONTROLLERS
PRIMARY RESISTANCE
STARTING**

 FireCat[®]

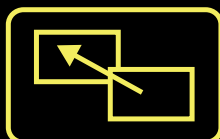

MAIN
MENU

 

ENTER



 
EXIT
PROGRAM

MENU


- **DIMENSIONAL DRAWINGS**
- WIRING SCHEMATIC
- WIRING SCHEMATIC W/-TSA
(POWER TRANSFER SWITCH)
- FIELD CONNECTIONS
- FIELD CONNECTIONS W/-TSA
(POWER TRANSFER SWITCH)
- FIELD CONNECTIONS (LINE AND
MOTOR FIELD WIRE TERMINAL
CAPACITY)

**ELECTRIC FIRE PUMP
CONTROLLERS
PRIMARY RESISTANCE
STARTING**

FireCat[®]

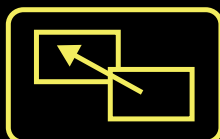

MAIN
MENU

 

ENTER



 
EXIT
PROGRAM

MENU


- DIMENSIONAL DRAWINGS
- **WIRING SCHEMATIC**
- WIRING SCHEMATIC W/-TSA
(POWER TRANSFER SWITCH)
- FIELD CONNECTIONS
- FIELD CONNECTIONS W/-TSA
(POWER TRANSFER SWITCH)
- FIELD CONNECTIONS (LINE AND
MOTOR FIELD WIRE TERMINAL
CAPACITY)

**ELECTRIC FIRE PUMP
CONTROLLERS
PRIMARY RESISTANCE
STARTING**

FireCat[®]

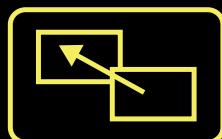

MAIN
MENU

 

ENTER



 
EXIT
PROGRAM

MENU


- DIMENSIONAL DRAWINGS
- WIRING SCHEMATIC
- **WIRING SCHEMATIC W/-TSA
(POWER TRANSFER SWITCH)**
- FIELD CONNECTIONS
- FIELD CONNECTIONS W/-TSA
(POWER TRANSFER SWITCH)
- FIELD CONNECTIONS (LINE AND
MOTOR FIELD WIRE TERMINAL
CAPACITY)

**ELECTRIC FIRE PUMP
CONTROLLERS
PRIMARY RESISTANCE
STARTING**

FireCat[®]

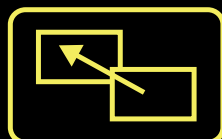

MAIN
MENU

 

ENTER



 
EXIT
PROGRAM

MENU


- DIMENSIONAL DRAWINGS
- WIRING SCHEMATIC
- WIRING SCHEMATIC W/-TSA
(POWER TRANSFER SWITCH)
- **FIELD CONNECTIONS**
- FIELD CONNECTIONS W/-TSA
(POWER TRANSFER SWITCH)
- FIELD CONNECTIONS (LINE AND
MOTOR FIELD WIRE TERMINAL
CAPACITY)

**ELECTRIC FIRE PUMP
CONTROLLERS
PRIMARY RESISTANCE
STARTING**

FireCat[®]

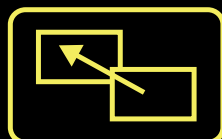

MAIN
MENU

 

ENTER



 
EXIT
PROGRAM

MENU


- DIMENSIONAL DRAWINGS
- WIRING SCHEMATIC
- WIRING SCHEMATIC W/-TSA
(POWER TRANSFER SWITCH)
- FIELD CONNECTIONS
- **FIELD CONNECTIONS W/-TSA
(POWER TRANSFER SWITCH)**
- FIELD CONNECTIONS (LINE AND
MOTOR FIELD WIRE TERMINAL
CAPACITY)

**ELECTRIC FIRE PUMP
CONTROLLERS
PRIMARY RESISTANCE
STARTING**

FireCat[®]

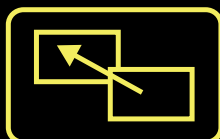

MAIN
MENU

 

ENTER



 
EXIT
PROGRAM

MENU


- DIMENSIONAL DRAWINGS
- WIRING SCHEMATIC
- WIRING SCHEMATIC W/-TSA
(POWER TRANSFER SWITCH)
- FIELD CONNECTIONS
- FIELD CONNECTIONS W/-TSA
(POWER TRANSFER SWITCH)
- **FIELD CONNECTIONS (LINE AND
MOTOR FIELD WIRE TERMINAL
CAPACITY)**

**ELECTRIC FIRE PUMP
CONTROLLERS
PRIMARY RESISTANCE
STARTING
(DIMENSIONAL DRAWINGS)**

FireCat[®]

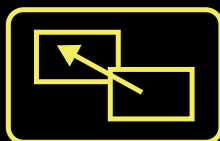

MAIN
MENU

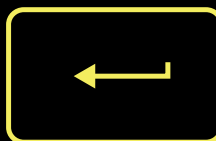 

ENTER



EXIT
PROGRAM

MENU

STANDARD CONTROLLERS


LINE VOLTAGE	HORSEPOWER RANGE				
200	3 - 60	---	75 - 100	---	125 - 250
208	3 - 60	---	75 - 100	---	125 - 250
220-240	3 - 60	---	75 - 100	---	125 - 300
380-415	3 - 100	---	---	125 - 150	200 - 500
440-480	3 - 100	125 - 150	---	200 - 250	300 - 600
550-600	3 - 100	125 - 150	---	200 - 300	---

**STANDARD CONTROLLERS W/-TSA
(POWER TRANSFER SWITCH)**



LINE VOLTAGE	HORSEPOWER RANGE				
200	3 - 60	---	75 - 100	---	125 - 250
208	3 - 60	---	75 - 100	---	125 - 250
220-240	3 - 60	---	75 - 100	---	125 - 300
380-415	3 - 100	---	---	125 - 150	200 - 500
440-480	3 - 100	125 - 150	---	200 - 250	300 - 600
550-600	3 - 100	125 - 150	---	200 - 300	---

**ELECTRIC FIRE PUMP
CONTROLLERS
PRIMARY RESISTANCE
STARTING
(SUBMITTAL PACKAGES)**

 FireCat[®]

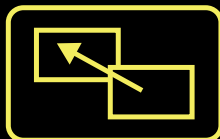

MAIN
MENU

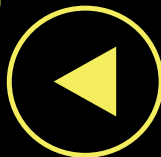  

ENTER



EXIT
PROGRAM

MENU

STANDARD CONTROLLERS


LINE VOLTAGE	HORSEPOWER RANGE				
200	3 - 60	---	75 - 100	---	125 - 250
208	3 - 60	---	75 - 100	---	125 - 250
220-240	3 - 60	---	75 - 100	---	125 - 300
380-415	3 - 100	---	---	125 - 150	200 - 500
440-480	3 - 100	125 - 150	---	200 - 250	300 - 600
550-600	3 - 100	125 - 150	---	200 - 300	---

**STANDARD CONTROLLERS W/-TSA
(POWER TRANSFER SWITCH)**


LINE VOLTAGE	HORSEPOWER RANGE				
200	3 - 60	---	75 - 100	---	125 - 250
208	3 - 60	---	75 - 100	---	125 - 250
220-240	3 - 60	---	75 - 100	---	125 - 300
380-415	3 - 100	---	---	125 - 150	200 - 500
440-480	3 - 100	125 - 150	---	200 - 250	300 - 600
550-600	3 - 100	125 - 150	---	200 - 300	---

**ELECTRIC FIRE PUMP
CONTROLLERS
AUTOTRANSFORMER
STARTING**

 FireCat[®]

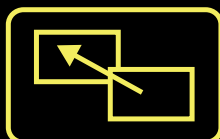

MAIN
MENU

 

ENTER



 
EXIT
PROGRAM

MENU


- **DIMENSIONAL DRAWINGS**
- WIRING SCHEMATIC
- WIRING SCHEMATIC W/-TSA
(POWER TRANSFER SWITCH)
- FIELD CONNECTIONS
- FIELD CONNECTIONS W/-TSA
(POWER TRANSFER SWITCH)
- FIELD CONNECTIONS (LINE AND
MOTOR FIELD WIRE TERMINAL
CAPACITY)

**ELECTRIC FIRE PUMP
CONTROLLERS
AUTOTRANSFORMER
STARTING**

FireCat[®]

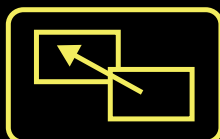

MAIN
MENU

 

ENTER



 
EXIT
PROGRAM

MENU


- DIMENSIONAL DRAWINGS
- **WIRING SCHEMATIC**
- WIRING SCHEMATIC W/-TSA
(POWER TRANSFER SWITCH)
- FIELD CONNECTIONS
- FIELD CONNECTIONS W/-TSA
(POWER TRANSFER SWITCH)
- FIELD CONNECTIONS (LINE AND
MOTOR FIELD WIRE TERMINAL
CAPACITY)

**ELECTRIC FIRE PUMP
CONTROLLERS
AUTOTRANSFORMER
STARTING**

FireCat[®]

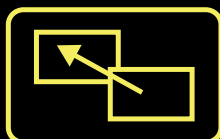

MAIN
MENU

 

ENTER



 
EXIT
PROGRAM

MENU


- DIMENSIONAL DRAWINGS
- WIRING SCHEMATIC
- **WIRING SCHEMATIC W/-TSA
(POWER TRANSFER SWITCH)**
- FIELD CONNECTIONS
- FIELD CONNECTIONS W/-TSA
(POWER TRANSFER SWITCH)
- FIELD CONNECTIONS (LINE AND
MOTOR FIELD WIRE TERMINAL
CAPACITY)

**ELECTRIC FIRE PUMP
CONTROLLERS
AUTOTRANSFORMER
STARTING**

FireCat[®]

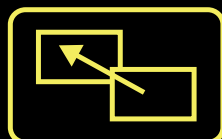

MAIN
MENU

 

ENTER



 
EXIT
PROGRAM

MENU


- DIMENSIONAL DRAWINGS
- WIRING SCHEMATIC
- WIRING SCHEMATIC W/-TSA
(POWER TRANSFER SWITCH)
- **FIELD CONNECTIONS**
- FIELD CONNECTIONS W/-TSA
(POWER TRANSFER SWITCH)
- FIELD CONNECTIONS (LINE AND
MOTOR FIELD WIRE TERMINAL
CAPACITY)

**ELECTRIC FIRE PUMP
CONTROLLERS
AUTOTRANSFORMER
STARTING**

FireCat[®]

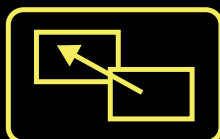

MAIN
MENU

 

ENTER



 
EXIT
PROGRAM

MENU


- DIMENSIONAL DRAWINGS
- WIRING SCHEMATIC
- WIRING SCHEMATIC W/-TSA
(POWER TRANSFER SWITCH)
- FIELD CONNECTIONS
- **FIELD CONNECTIONS W/-TSA
(POWER TRANSFER SWITCH)**
- FIELD CONNECTIONS (LINE AND
MOTOR FIELD WIRE TERMINAL
CAPACITY)

**ELECTRIC FIRE PUMP
CONTROLLERS
AUTOTRANSFORMER
STARTING**

FireCat[®]

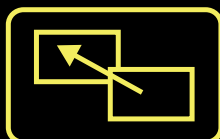

MAIN
MENU

 

ENTER



 
EXIT
PROGRAM

MENU


- DIMENSIONAL DRAWINGS
- WIRING SCHEMATIC
- WIRING SCHEMATIC W/-TSA
(POWER TRANSFER SWITCH)
- FIELD CONNECTIONS
- FIELD CONNECTIONS W/-TSA
(POWER TRANSFER SWITCH)
- **FIELD CONNECTIONS (LINE AND
MOTOR FIELD WIRE TERMINAL
CAPACITY)**

**ELECTRIC FIRE PUMP
CONTROLLERS
AUTOTRANSFORMER
STARTING
(DIMENSIONAL DRAWINGS)**

FireCat[®]

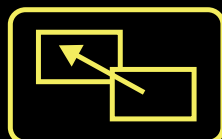

MAIN
MENU

 

ENTER



EXIT
PROGRAM

MENU

STANDARD CONTROLLERS


LINE VOLTAGE	HORSEPOWER RANGE			
	3 - 60	---	75 - 100	125 - 250
200	3 - 60	---	75 - 100	125 - 250
208	3 - 60	---	75 - 100	125 - 250
220-240	3 - 60	---	75 - 100	125 - 300
380-415	3 - 100	---	125 - 150	200 - 500
440-480	3 - 125	150	200 - 250	300 - 600
550-600	3 - 125	150	200 - 300	---

**STANDARD CONTROLLERS W/-TSA
(POWER TRANSFER SWITCH)**


LINE VOLTAGE	HORSEPOWER RANGE			
	3 - 60	---	75 - 100	125 - 250
200	3 - 60	---	75 - 100	125 - 250
208	3 - 60	---	75 - 100	125 - 250
220-240	3 - 60	---	75 - 100	125 - 300
380-415	3 - 100	---	125 - 150	200 - 500
440-480	3 - 125	150	200 - 250	300 - 600
550-600	3 - 125	150	200 - 300	---

**ELECTRIC FIRE PUMP
CONTROLLERS
AUTOTRANSFORMER
STARTING
(SUBMITTAL PACKAGES)**

 FireCat[®]

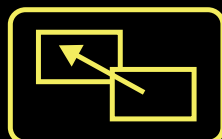

MAIN
MENU

 

ENTER



EXIT
PROGRAM

MENU

STANDARD CONTROLLERS


LINE VOLTAGE	HORSEPOWER RANGE			
200	3 - 60	---	75 - 100	125 - 250
208	3 - 60	---	75 - 100	125 - 250
220-240	3 - 60	---	75 - 100	125 - 300
380-415	3 - 100	---	125 - 150	200 - 500
440-480	3 - 125	150	200 - 250	300 - 600
550-600	3 - 125	150	200 - 300	---

**STANDARD CONTROLLERS W/-TSA
(POWER TRANSFER SWITCH)**


LINE VOLTAGE	HORSEPOWER RANGE			
200	3 - 60	---	75 - 100	125 - 250
208	3 - 60	---	75 - 100	125 - 250
220-240	3 - 60	---	75 - 100	125 - 300
380-415	3 - 100	---	125 - 150	200 - 500
440-480	3 - 125	150	200 - 250	300 - 600
550-600	3 - 125	150	200 - 300	---

**ELECTRIC FIRE PUMP
CONTROLLERS
DIGITAL SOFT
START/STOP**

 FireCat[®]

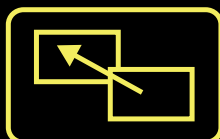

MAIN
MENU

 

ENTER



 
EXIT
PROGRAM

MENU


- **DIMENSIONAL DRAWINGS**
- WIRING SCHEMATIC
- WIRING SCHEMATIC W/-TSA
(POWER TRANSFER SWITCH)
- FIELD CONNECTIONS
- FIELD CONNECTIONS W/-TSA
(POWER TRANSFER SWITCH)
- FIELD CONNECTIONS (LINE AND
MOTOR FIELD WIRE TERMINAL
CAPACITY)

**ELECTRIC FIRE PUMP
CONTROLLERS
DIGITAL SOFT
START/STOP**

FireCat[®]

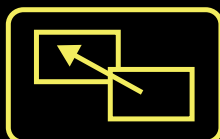

MAIN
MENU

 

ENTER



 
EXIT
PROGRAM

MENU


- DIMENSIONAL DRAWINGS
- **WIRING SCHEMATIC**
- WIRING SCHEMATIC W/-TSA
(POWER TRANSFER SWITCH)
- FIELD CONNECTIONS
- FIELD CONNECTIONS W/-TSA
(POWER TRANSFER SWITCH)
- FIELD CONNECTIONS (LINE AND
MOTOR FIELD WIRE TERMINAL
CAPACITY)

**ELECTRIC FIRE PUMP
CONTROLLERS
DIGITAL SOFT
START/STOP**

FireCat[®]

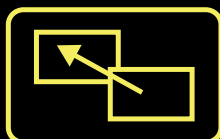

MAIN
MENU

 

ENTER



 
EXIT
PROGRAM

MENU


- DIMENSIONAL DRAWINGS
- WIRING SCHEMATIC
- **WIRING SCHEMATIC W/-TSA
(POWER TRANSFER SWITCH)**
- FIELD CONNECTIONS
- FIELD CONNECTIONS W/-TSA
(POWER TRANSFER SWITCH)
- FIELD CONNECTIONS (LINE AND
MOTOR FIELD WIRE TERMINAL
CAPACITY)

**ELECTRIC FIRE PUMP
CONTROLLERS
DIGITAL SOFT
START/STOP**

FireCat[®]

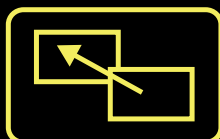

MAIN
MENU

 

ENTER



 
EXIT
PROGRAM

MENU


- DIMENSIONAL DRAWINGS
- WIRING SCHEMATIC
- WIRING SCHEMATIC W/-TSA
(POWER TRANSFER SWITCH)
- **FIELD CONNECTIONS**
- FIELD CONNECTIONS W/-TSA
(POWER TRANSFER SWITCH)
- FIELD CONNECTIONS (LINE AND
MOTOR FIELD WIRE TERMINAL
CAPACITY)

**ELECTRIC FIRE PUMP
CONTROLLERS
DIGITAL SOFT
START/STOP**

FireCat[®]

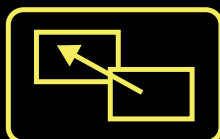

MAIN
MENU

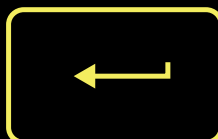 

ENTER



 
EXIT
PROGRAM

MENU


- DIMENSIONAL DRAWINGS
- WIRING SCHEMATIC
- WIRING SCHEMATIC W/-TSA
(POWER TRANSFER SWITCH)
- FIELD CONNECTIONS
- **FIELD CONNECTIONS W/-TSA
(POWER TRANSFER SWITCH)**
- FIELD CONNECTIONS (LINE AND
MOTOR FIELD WIRE TERMINAL
CAPACITY)

**ELECTRIC FIRE PUMP
CONTROLLERS
DIGITAL SOFT
START/STOP**

FireCat[®]

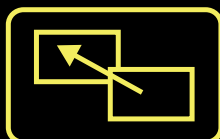

MAIN
MENU

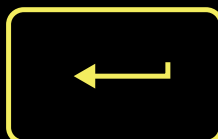 

ENTER



 
EXIT
PROGRAM

MENU


- DIMENSIONAL DRAWINGS
- WIRING SCHEMATIC
- WIRING SCHEMATIC W/-TSA
(POWER TRANSFER SWITCH)
- FIELD CONNECTIONS
- FIELD CONNECTIONS W/-TSA
(POWER TRANSFER SWITCH)
- **FIELD CONNECTIONS (LINE AND
MOTOR FIELD WIRE TERMINAL
CAPACITY)**

**ELECTRIC FIRE PUMP
CONTROLLERS
DIGITAL SOFT
START/STOP
(DIMENSIONAL DRAWINGS)**

FireCat[®]

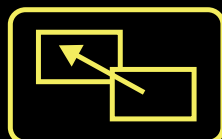

MAIN
MENU

 

ENTER



EXIT
PROGRAM

MENU

STANDARD CONTROLLERS


LINE VOLTAGE	HORSEPOWER RANGE			
200	3 - 50	60	75 - 100	125 - 250
208	3 - 50	60	75 - 100	125 - 250
220-240	3 - 60	- - -	75 - 100	125 - 250
380-415	3 - 75	100	125 - 150	200 - 450
440-480	3 - 125	150	200 - 250	300 - 600
550-600	3 - 150	- - -	200 - 300	- - -

STANDARD CONTROLLERS W/-TSA (POWER TRANSFER SWITCH)


LINE VOLTAGE	HORSEPOWER RANGE			
200	3 - 50	60	75 - 100	125 - 250
208	3 - 50	60	75 - 100	125 - 250
220-240	3 - 60	- - -	75 - 100	125 - 250
380-415	3 - 75	100	125 - 150	200 - 450
440-480	3 - 125	150	200 - 250	300 - 600
550-600	3 - 150	- - -	200 - 300	- - -

**ELECTRIC FIRE PUMP
CONTROLLERS
DIGITAL SOFT
START/STOP
(SUBMITTAL PACKAGES)**

 FireCat[®]

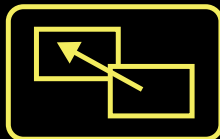

MAIN
MENU

 

ENTER



EXIT
PROGRAM

MENU

STANDARD CONTROLLERS


LINE VOLTAGE	HORSEPOWER RANGE			
200	3 - 50	60	75 - 100	125 - 250
208	3 - 50	60	75 - 100	125 - 250
220-240	3 - 60	- - -	75 - 100	125 - 250
380-415	3 - 75	100	125 - 150	200 - 450
440-480	3 - 125	150	200 - 250	300 - 600
550-600	3 - 150	- - -	200 - 300	- - -

**STANDARD CONTROLLERS W/-TSA
(POWER TRANSFER SWITCH)**



LINE VOLTAGE	HORSEPOWER RANGE			
200	3 - 50	60	75 - 100	125 - 250
208	3 - 50	60	75 - 100	125 - 250
220-240	3 - 60	- - -	75 - 100	125 - 250
380-415	3 - 75	100	125 - 150	200 - 450
440-480	3 - 125	150	200 - 250	300 - 600
550-600	3 - 150	- - -	200 - 300	- - -

Alarm Panels
Type A
Select item to open.
(Documents open in new
window)

 FireCat[®]

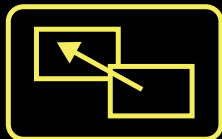

MAIN
MENU

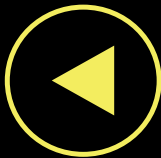  

ENTER



 
EXIT
PROGRAM

MENU


- **DIMENSIONAL DRAWING**
- **WIRING SCHEMATIC**

Alarm Panels
Type A
Select item to open.
(Documents open in new
window)

FireCat[®]

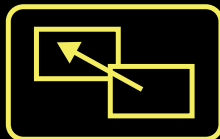

MAIN
MENU

 

ENTER



 
EXIT
PROGRAM

MENU


- DIMENSIONAL DRAWING
- WIRING SCHEMATIC

Alarm Panels
Type F
Select item to open.
(Documents open in new
window)

FireCat[®]

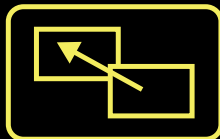

MAIN
MENU

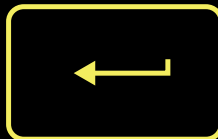 

ENTER



 
EXIT
PROGRAM

MENU


- **DIMENSIONAL DRAWING**
- WIRING SCHEMATIC

Alarm Panels
Type F
Select item to open.
(Documents open in new
window)

FireCat[®]

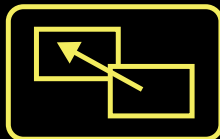

MAIN
MENU

 

ENTER



 
EXIT
PROGRAM

MENU


- DIMENSIONAL DRAWING
- **WIRING SCHEMATIC**

**Jockey Pump
Controllers**
Select item to open.
(Documents open in new
window)

FireCat[®]

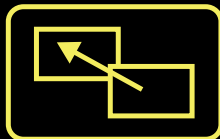

MAIN
MENU

 

ENTER



 
EXIT
PROGRAM

MENU


- **DIMENSIONAL DRAWING
(NEMA TYPE 2 ENCLOSURE)**
- DIMENSIONAL DRAWING
(NEMA TYPE 3R ENCLOSURE)
- DIMENSIONAL DRAWING
(NEMA TYPE 4/4x/12 ENCLOSURE)
- WIRING SCHEMATIC / FIELD
CONNECTIONS

**Jockey Pump
Controllers**
Select item to open.
(Documents open in new
window)

FireCat[®]

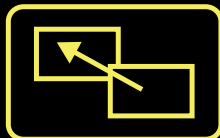

MAIN
MENU

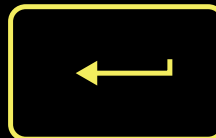 

ENTER



 
EXIT
PROGRAM

MENU


- DIMENSIONAL DRAWING
(NEMA TYPE 2 ENCLOSURE)
- DIMENSIONAL DRAWING
(NEMA TYPE 3R ENCLOSURE)
- DIMENSIONAL DRAWING
(NEMA TYPE 4/4x/12 ENCLOSURE)
- WIRING SCHEMATIC / FIELD
CONNECTIONS

**Jockey Pump
Controllers**
Select item to open.
(Documents open in new
window)

FireCat[®]

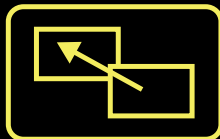

MAIN
MENU

 

ENTER



 
EXIT
PROGRAM

MENU


- DIMENSIONAL DRAWING
(NEMA TYPE 2 ENCLOSURE)
- DIMENSIONAL DRAWING
(NEMA TYPE 3R ENCLOSURE)
- DIMENSIONAL DRAWING
(NEMA TYPE 4/4x/12 ENCLOSURE)
- WIRING SCHEMATIC / FIELD
CONNECTIONS

**Jockey Pump
Controllers**
Select item to open.
(Documents open in new
window)

FireCat[®]

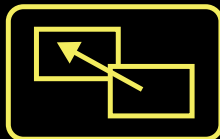

MAIN
MENU

 

ENTER



EXIT
PROGRAM

 
MENU

- DIMENSIONAL DRAWING
(NEMA TYPE 2 ENCLOSURE)
- DIMENSIONAL DRAWING
(NEMA TYPE 3R ENCLOSURE)
- DIMENSIONAL DRAWING
(NEMA TYPE 4/4x/12 ENCLOSURE)
- **WIRING SCHEMATIC / FIELD
CONNECTIONS**


DIESEL ENGINE FIRE PUMP CONTROLLERS

STANDARD

FireCat®

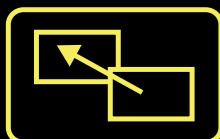

MAIN
MENU

 

ENTER



EXIT
PROGRAM

 
MENU

- DIMENSIONAL DRAWING
(WALL MOUNT)
- DIMENSIONAL DRAWING
(WITH 12" FLOOR MTG. LEGS)
- DIMENSIONAL DRAWING
(WITH 6" BASE MTG. LEGS)
- WIRING SCHEMATIC
- FIELD CONNECTIONS


DIESEL ENGINE FIRE PUMP CONTROLLERS

STANDARD

FireCat®

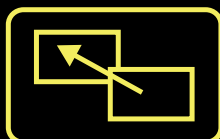

MAIN
MENU

 

ENTER



EXIT
PROGRAM

 
MENU

- DIMENSIONAL DRAWING
(WALL MOUNT)
- DIMENSIONAL DRAWING
(WITH 12" FLOOR MTG. LEGS)
- DIMENSIONAL DRAWING
(WITH 6" BASE MTG. LEGS)
- WIRING SCHEMATIC
- FIELD CONNECTIONS


DIESEL ENGINE FIRE PUMP CONTROLLERS

STANDARD

FireCat®

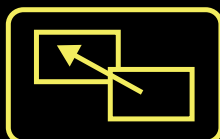

MAIN
MENU

 

ENTER



EXIT
PROGRAM

 
MENU

- DIMENSIONAL DRAWING
(WALL MOUNT)
- DIMENSIONAL DRAWING
(WITH 12" FLOOR MTG. LEGS)
- DIMENSIONAL DRAWING
(WITH 6" BASE MTG. LEGS)
- WIRING SCHEMATIC
- FIELD CONNECTIONS


DIESEL ENGINE FIRE PUMP CONTROLLERS

STANDARD

FireCat®

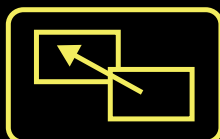

MAIN
MENU

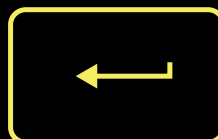 

ENTER



EXIT
PROGRAM

 
MENU

- DIMENSIONAL DRAWING (WALL MOUNT)
- DIMENSIONAL DRAWING (WITH 12" FLOOR MTG. LEGS)
- DIMENSIONAL DRAWING (WITH 6" BASE MTG. LEGS)
- **WIRING SCHEMATIC**
- FIELD CONNECTIONS


DIESEL ENGINE FIRE PUMP CONTROLLERS

STANDARD

FireCat®

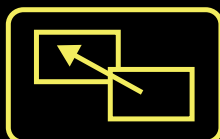

MAIN
MENU

 

ENTER



 
EXIT
PROGRAM

MENU


- DIMENSIONAL DRAWING
(WALL MOUNT)
- DIMENSIONAL DRAWING
(WITH 12" FLOOR MTG. LEGS)
- DIMENSIONAL DRAWING
(WITH 6" BASE MTG. LEGS)
- WIRING SCHEMATIC
- **FIELD CONNECTIONS**

POWER TRANSFER SWITCHES

FireCat®

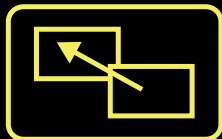

MAIN
MENU

 

ENTER



 
EXIT
PROGRAM

MENU



- -TA (FTA976 ASSEMBLED WITH LTD. SERVICE CONTROLLERS)
- -TSA (FTA950 ASSEMBLED WITH ELEC. CONTROLLERS)
- SEPARATELY MOUNTED
- BYPASS / ISLOATION SWITCHES

POWER TRANSFER SWITCHES

FireCat®

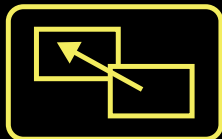

MAIN
MENU

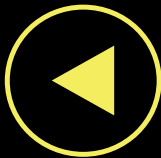  

ENTER



 
EXIT
PROGRAM

MENU



- -TA (FTA976 ASSEMBLED WITH LTD. SERVICE CONTROLLERS)
- -TSA (FTA950 ASSEMBLED WITH ELEC. CONTROLLERS)
- SEPARATELY MOUNTED
- BYPASS / ISLOATION SWITCHES

POWER TRANSFER SWITCHES

FireCat®

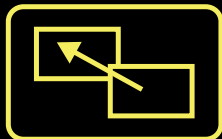

MAIN
MENU

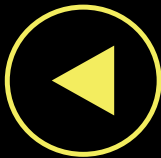  

ENTER



 
EXIT
PROGRAM

MENU



- -TA (FTA976 ASSEMBLED WITH LTD. SERVICE CONTROLLERS)
- -TSA (FTA950 ASSEMBLED WITH ELEC. CONTROLLERS)
- **SEPARATELY MOUNTED**
- BYPASS / ISLOATION SWITCHES

POWER TRANSFER SWITCHES

FireCat®

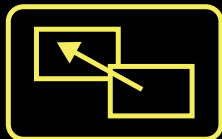

MAIN
MENU

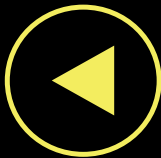  

ENTER



EXIT
PROGRAM

 
MENU

- -TA (FTA976 ASSEMBLED WITH LTD. SERVICE CONTROLLERS)
- -TSA (FTA950 ASSEMBLED WITH ELEC. CONTROLLERS)
- SEPARATELY MOUNTED
- **BYPASS / ISLOATION SWITCHES**


POWER TRANSFER SWITCHES

(FOR USE WITH LIMITED SERVICE
ELECTRIC FIRE PUMP
CONTROLLERS (FTA976))

FireCat®

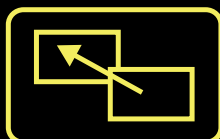

MAIN
MENU

 


ENTER



EXIT
PROGRAM

MENU

 
- **BROCHURE**
- PRODUCT DESCRIPTION
- MODEL NUMBER SELECTION GUIDE
- SPECIFICATIONS (pdf / word )
- WIRING SCHEMATIC
- FIELD CONNECTIONS
- INSTRUCTIONS

NOTE: SEE LIMITED SERVICE
CONTROLLER SECTION FOR
DIMENSIONAL DRAWINGS


POWER TRANSFER SWITCHES

(FOR USE WITH LIMITED SERVICE
ELECTRIC FIRE PUMP
CONTROLLERS (FTA976))

FireCat®

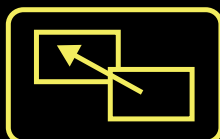

MAIN
MENU

 


ENTER



EXIT
PROGRAM

MENU

 
- BROCHURE
- **PRODUCT DESCRIPTION**
- MODEL NUMBER SELECTION GUIDE
- SPECIFICATIONS (pdf / word )
- WIRING SCHEMATIC
- FIELD CONNECTIONS
- INSTRUCTIONS

NOTE: SEE LIMITED SERVICE
CONTROLLER SECTION FOR
DIMENSIONAL DRAWINGS


POWER TRANSFER SWITCHES

(FOR USE WITH LIMITED SERVICE
ELECTRIC FIRE PUMP
CONTROLLERS (FTA976))

FireCat®

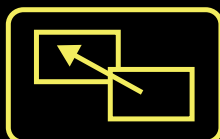

MAIN
MENU

 


ENTER



EXIT
PROGRAM

MENU

 
- BROCHURE
- PRODUCT DESCRIPTION
- **MODEL NUMBER SELECTION GUIDE**
- SPECIFICATIONS (pdf / word )
- WIRING SCHEMATIC
- FIELD CONNECTIONS
- INSTRUCTIONS

NOTE: SEE LIMITED SERVICE
CONTROLLER SECTION FOR
DIMENSIONAL DRAWINGS


POWER TRANSFER SWITCHES

(FOR USE WITH LIMITED SERVICE
ELECTRIC FIRE PUMP
CONTROLLERS (FTA976))

FireCat®

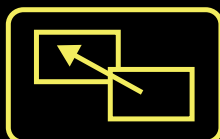

MAIN
MENU

 


ENTER



EXIT
PROGRAM

MENU

 
- BROCHURE
- PRODUCT DESCRIPTION
- MODEL NUMBER SELECTION GUIDE
- **SPECIFICATIONS** (pdf / word )
- WIRING SCHEMATIC
- FIELD CONNECTIONS
- INSTRUCTIONS

NOTE: SEE LIMITED SERVICE
CONTROLLER SECTION FOR
DIMENSIONAL DRAWINGS


POWER TRANSFER SWITCHES

(FOR USE WITH LIMITED SERVICE
ELECTRIC FIRE PUMP
CONTROLLERS (FTA976))

FireCat®

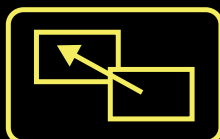

MAIN
MENU

 


ENTER



EXIT
PROGRAM

MENU

 
- BROCHURE
- PRODUCT DESCRIPTION
- MODEL NUMBER SELECTION GUIDE
- SPECIFICATIONS (pdf / word )
- **WIRING SCHEMATIC**
- FIELD CONNECTIONS
- INSTRUCTIONS

NOTE: SEE LIMITED SERVICE
CONTROLLER SECTION FOR
DIMENSIONAL DRAWINGS


POWER TRANSFER SWITCHES

(FOR USE WITH LIMITED SERVICE
ELECTRIC FIRE PUMP
CONTROLLERS (FTA976))

FireCat®

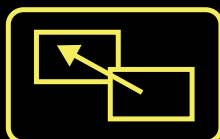

MAIN
MENU

 


ENTER



EXIT
PROGRAM

MENU

 
- BROCHURE
- PRODUCT DESCRIPTION
- MODEL NUMBER SELECTION GUIDE
- SPECIFICATIONS (pdf / word )
- WIRING SCHEMATIC
- **FIELD CONNECTIONS**
- INSTRUCTIONS

NOTE: SEE LIMITED SERVICE
CONTROLLER SECTION FOR
DIMENSIONAL DRAWINGS


POWER TRANSFER SWITCHES

(FOR USE WITH LIMITED SERVICE
ELECTRIC FIRE PUMP
CONTROLLERS (FTA976))

FireCat®

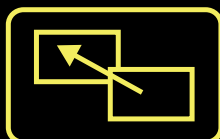

MAIN
MENU

 


ENTER



EXIT
PROGRAM

MENU

 
- BROCHURE
- PRODUCT DESCRIPTION
- MODEL NUMBER SELECTION GUIDE
- SPECIFICATIONS (pdf / word )
- WIRING SCHEMATIC
- FIELD CONNECTIONS
- **INSTRUCTIONS**

NOTE: SEE LIMITED SERVICE
CONTROLLER SECTION FOR
DIMENSIONAL DRAWINGS



POWER TRANSFER SWITCHES

(FOR USE WITH ELECTRIC FIRE
PUMP CONTROLLERS (FTA950))

FireCat®

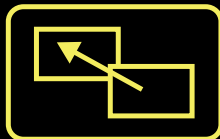

MAIN
MENU

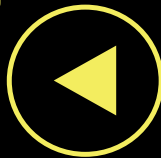  


ENTER



EXIT
PROGRAM

MENU

 
- **BROCHURE**
- PRODUCT DESCRIPTION
- MODEL NUMBER SELECTION GUIDE
- SPECIFICATIONS (pdf / word )
- WIRING SCHEMATIC
- FIELD CONNECTIONS
- INSTRUCTIONS

NOTE: SEE ELECTRIC FIRE PUMP
CONTROLLER SECTION FOR
DIMENSIONAL DRAWINGS


POWER TRANSFER SWITCHES

(FOR USE WITH ELECTRIC FIRE
PUMP CONTROLLERS (FTA950))

FireCat®

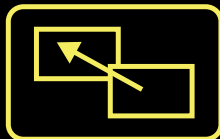

MAIN
MENU

 


ENTER



EXIT
PROGRAM

MENU

 
- BROCHURE
- **PRODUCT DESCRIPTION**
- MODEL NUMBER SELECTION GUIDE
- SPECIFICATIONS (pdf / word )
- WIRING SCHEMATIC
- FIELD CONNECTIONS
- INSTRUCTIONS

NOTE: SEE ELECTRIC FIRE PUMP
CONTROLLER SECTION FOR
DIMENSIONAL DRAWINGS


POWER TRANSFER SWITCHES

(FOR USE WITH ELECTRIC FIRE
PUMP CONTROLLERS (FTA950))

FireCat®

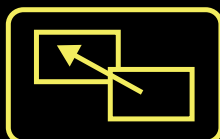

MAIN
MENU

 


ENTER



EXIT
PROGRAM

MENU

 
- BROCHURE
- PRODUCT DESCRIPTION
- **MODEL NUMBER SELECTION GUIDE**
- SPECIFICATIONS (pdf / word )
- WIRING SCHEMATIC
- FIELD CONNECTIONS
- INSTRUCTIONS

NOTE: SEE ELECTRIC FIRE PUMP
CONTROLLER SECTION FOR
DIMENSIONAL DRAWINGS



POWER TRANSFER SWITCHES

(FOR USE WITH ELECTRIC FIRE
PUMP CONTROLLERS (FTA950))

FireCat®

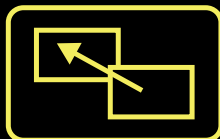

MAIN
MENU

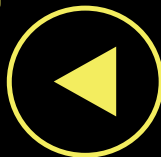  


ENTER



EXIT
PROGRAM

MENU

 
- BROCHURE
- PRODUCT DESCRIPTION
- MODEL NUMBER SELECTION GUIDE
- **SPECIFICATIONS** (pdf / word )
- WIRING SCHEMATIC
- FIELD CONNECTIONS
- INSTRUCTIONS

NOTE: SEE ELECTRIC FIRE PUMP
CONTROLLER SECTION FOR
DIMENSIONAL DRAWINGS


POWER TRANSFER SWITCHES

(FOR USE WITH ELECTRIC FIRE
PUMP CONTROLLERS (FTA950))

FireCat®

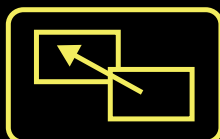

MAIN
MENU

 


ENTER



EXIT
PROGRAM

MENU

 
- BROCHURE
- PRODUCT DESCRIPTION
- MODEL NUMBER SELECTION GUIDE
- SPECIFICATIONS (pdf / word )
- **WIRING SCHEMATIC**
- FIELD CONNECTIONS
- INSTRUCTIONS

NOTE: SEE ELECTRIC FIRE PUMP
CONTROLLER SECTION FOR
DIMENSIONAL DRAWINGS


POWER TRANSFER SWITCHES

(FOR USE WITH ELECTRIC FIRE
PUMP CONTROLLERS (FTA950))

FireCat®

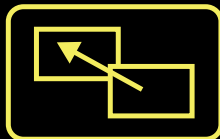

MAIN
MENU

 


ENTER



EXIT
PROGRAM

 MENU


- BROCHURE
- PRODUCT DESCRIPTION
- MODEL NUMBER SELECTION GUIDE
- SPECIFICATIONS (pdf / word )
- WIRING SCHEMATIC
- **FIELD CONNECTIONS**
- INSTRUCTIONS

NOTE: SEE ELECTRIC FIRE PUMP
CONTROLLER SECTION FOR
DIMENSIONAL DRAWINGS


POWER TRANSFER SWITCHES

(FOR USE WITH ELECTRIC FIRE
PUMP CONTROLLERS (FTA950))

 FireCat®

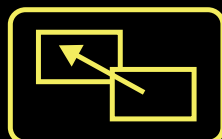

MAIN
MENU

 


ENTER



EXIT
PROGRAM

 
MENU

- BROCHURE
- PRODUCT DESCRIPTION
- MODEL NUMBER SELECTION GUIDE
- SPECIFICATIONS (pdf / word )
- WIRING SCHEMATIC
- FIELD CONNECTIONS
- **INSTRUCTIONS**



NOTE: SEE ELECTRIC FIRE PUMP
CONTROLLER SECTION FOR
DIMENSIONAL DRAWINGS

**LIMITED SERVICE FIRE
PUMP CONTROLLERS
(FULL VOLTAGE
STARTING)
(SUBMITTAL PACKAGES)**

FireCat[®]

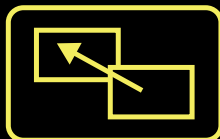

MAIN
MENU

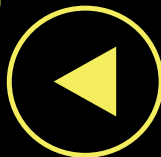  

ENTER



 
EXIT
PROGRAM

MENU


- SUBMITTAL PACKAGE
- SUBMITTAL PACKAGE WITH
POWER TRANSFER SWITCH

**LIMITED SERVICE FIRE
PUMP CONTROLLERS
(FULL VOLTAGE
STARTING)
(SUBMITTAL PACKAGES)**

FireCat[®]

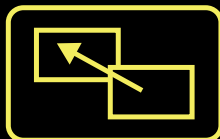

MAIN
MENU

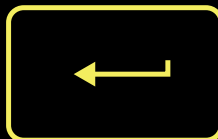 

ENTER



EXIT
PROGRAM

MENU

 
- SUBMITTAL PACKAGE
- SUBMITTAL PACKAGE WITH
POWER TRANSFER SWITCH

POWER TRANSFER SWITCHES


(FOR USE WITH ELECTRIC FIRE
PUMP CONTROLLERS)

-INSTRUCTIONS-

FireCat®

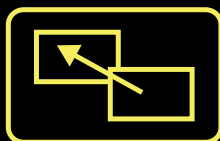

MAIN
MENU

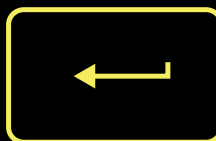 

ENTER



EXIT
PROGRAM

MENU

- INSTRUCTIONS
(SELECT REQUIRED HP &
VOLTAGE BELOW)


AMPERE RATING

Horse- power	200- 208V	220- 240V	380- 415V	440- 480V	550- 600V
15-25	100	100	100	100	100
30	150	100	100	100	100
40	150	150	100	100	100
50	225	150	100	100	100
60	225	225	150	100	100
75	260	225	150	150	100
100	400	400	225	150	150
125	600	400	260	225	150
150	600	600	400	225	225
200	800	600	400	400	225
250	800	800	600	400	400
300	—	800	600	600	400
350	—	—	800	600	400
400	—	—	800	600	600
450	—	—	1000	600	600
500	—	—	—	800	800
600	—	—	—	1000	800
700	—	—	—	1000	800



**SEPARATELY MOUNTED
POWER TRANSFER
SWITCHES**

**(FOR USE WITH ELECTRIC FIRE
PUMP CONTROLLERS)**

 FireCat[®]

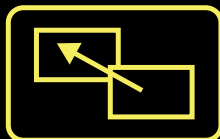

MAIN
MENU

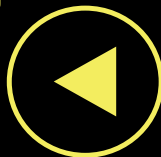  

ENTER



EXIT
PROGRAM

 
MENU

- **BROCHURE**
- PRODUCT DESCRIPTION
- MODEL NUMBER SELECTION GUIDE
- SPECIFICATIONS
- DIMENSIONAL DRAWINGS
- WIRING SCHEMATIC
- FIELD CONNECTIONS
- INSTRUCTIONS


**SEPARATELY MOUNTED
POWER TRANSFER
SWITCHES**

**(FOR USE WITH ELECTRIC FIRE
PUMP CONTROLLERS)**

FireCat[®]

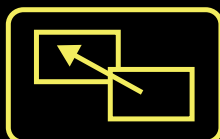

MAIN
MENU

 

ENTER



EXIT
PROGRAM

 
MENU

- BROCHURE
- **PRODUCT DESCRIPTION**
- MODEL NUMBER SELECTION GUIDE
- SPECIFICATIONS
- DIMENSIONAL DRAWINGS
- WIRING SCHEMATIC
- FIELD CONNECTIONS
- INSTRUCTIONS


**SEPARATELY MOUNTED
POWER TRANSFER
SWITCHES**

**(FOR USE WITH ELECTRIC FIRE
PUMP CONTROLLERS)**

FireCat[®]

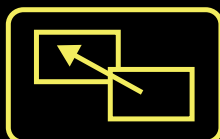

MAIN
MENU

 

ENTER



EXIT
PROGRAM

 
MENU

- BROCHURE
- PRODUCT DESCRIPTION
- **MODEL NUMBER SELECTION GUIDE**
- SPECIFICATIONS
- DIMENSIONAL DRAWINGS
- WIRING SCHEMATIC
- FIELD CONNECTIONS
- INSTRUCTIONS


**SEPARATELY MOUNTED
POWER TRANSFER
SWITCHES**

**(FOR USE WITH ELECTRIC FIRE
PUMP CONTROLLERS)**

FireCat[®]

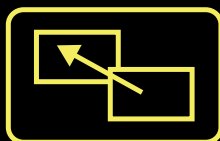

MAIN
MENU

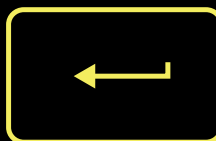 

ENTER



EXIT
PROGRAM

 
MENU

- BROCHURE
- PRODUCT DESCRIPTION
- MODEL NUMBER SELECTION GUIDE
- **SPECIFICATIONS**
- DIMENSIONAL DRAWINGS
- WIRING SCHEMATIC
- FIELD CONNECTIONS
- INSTRUCTIONS


**SEPARATELY MOUNTED
POWER TRANSFER
SWITCHES**

**(FOR USE WITH ELECTRIC FIRE
PUMP CONTROLLERS)**

FireCat[®]

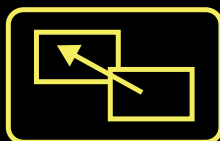

MAIN
MENU

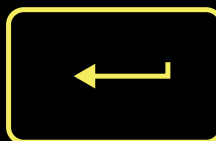 

ENTER



EXIT
PROGRAM

 
MENU

- BROCHURE
- PRODUCT DESCRIPTION
- MODEL NUMBER SELECTION GUIDE
- SPECIFICATIONS
- **DIMENSIONAL DRAWINGS**
- WIRING SCHEMATIC
- FIELD CONNECTIONS
- INSTRUCTIONS


**SEPARATELY MOUNTED
POWER TRANSFER
SWITCHES**

**(FOR USE WITH ELECTRIC FIRE
PUMP CONTROLLERS)**

FireCat[®]

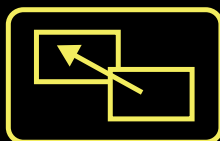

MAIN
MENU

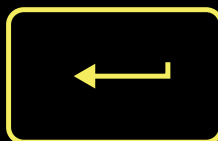 

ENTER



EXIT
PROGRAM

 
MENU

- BROCHURE
- PRODUCT DESCRIPTION
- MODEL NUMBER SELECTION GUIDE
- SPECIFICATIONS
- DIMENSIONAL DRAWINGS
- **WIRING SCHEMATIC**
- FIELD CONNECTIONS
- INSTRUCTIONS


**SEPARATELY MOUNTED
POWER TRANSFER
SWITCHES**

**(FOR USE WITH ELECTRIC FIRE
PUMP CONTROLLERS)**

FireCat[®]

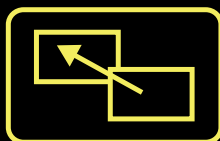

MAIN
MENU

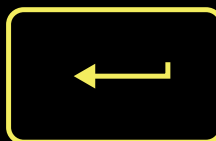 

ENTER



EXIT
PROGRAM

 
MENU

- BROCHURE
- PRODUCT DESCRIPTION
- MODEL NUMBER SELECTION GUIDE
- SPECIFICATIONS
- DIMENSIONAL DRAWINGS
- WIRING SCHEMATIC
- **FIELD CONNECTIONS**
- INSTRUCTIONS


**SEPARATELY MOUNTED
POWER TRANSFER
SWITCHES**

**(FOR USE WITH ELECTRIC FIRE
PUMP CONTROLLERS)**

FireCat[®]

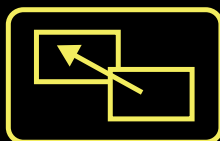

MAIN
MENU

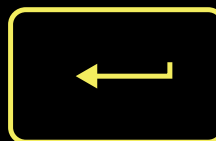 

ENTER



EXIT
PROGRAM

 
MENU

- BROCHURE
- PRODUCT DESCRIPTION
- MODEL NUMBER SELECTION GUIDE
- SPECIFICATIONS
- DIMENSIONAL DRAWINGS
- WIRING SCHEMATIC
- FIELD CONNECTIONS
- **INSTRUCTIONS**



**SEPARATELY MOUNTED
POWER TRANSFER
SWITCHES**

**(FOR USE WITH ELECTRIC FIRE
PUMP CONTROLLERS)
SPECIFICATIONS**

FireCat[®]

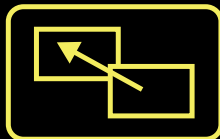

MAIN
MENU

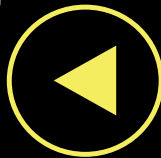  

ENTER



EXIT
PROGRAM

 
MENU

- **FTA902 -Gen. Set** (pdf / word)
- FTA903 - Gen. Set (pdf / word)
- FTA952 - 2nd Util. (pdf / word)
- FTA953 - 2nd Util. (pdf / word)


**SEPARATELY MOUNTED
POWER TRANSFER
SWITCHES**

**(FOR USE WITH ELECTRIC FIRE
PUMP CONTROLLERS)
SPECIFICATIONS**

FireCat[®]

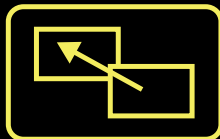

MAIN
MENU

 





ENTER



EXIT
PROGRAM

 
MENU

- FTA902 -Gen. Set (pdf / word 
- FTA903 - Gen. Set (pdf / word 
- FTA952 - 2nd Util. (pdf / word 
- FTA953 - 2nd Util. (pdf / word 



**SEPARATELY MOUNTED
POWER TRANSFER
SWITCHES**

**(FOR USE WITH ELECTRIC FIRE
PUMP CONTROLLERS)
SPECIFICATIONS**

FireCat[®]

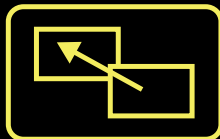

MAIN
MENU

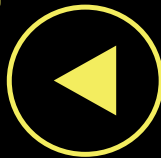  

ENTER



EXIT
PROGRAM

 
MENU

- FTA902 - Gen. Set (pdf / word)
- FTA903 - Gen. Set (pdf / word)
- **FTA952 - 2nd Util. (pdf / word)**
- FTA953 - 2nd Util. (pdf / word)


**SEPARATELY MOUNTED
POWER TRANSFER
SWITCHES**

**(FOR USE WITH ELECTRIC FIRE
PUMP CONTROLLERS)
SPECIFICATIONS**

FireCat[®]

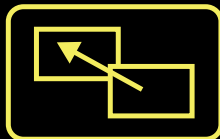

MAIN
MENU

 





ENTER



EXIT
PROGRAM

 
MENU

- FTA902 -Gen. Set (pdf / word 
- FTA903 - Gen. Set (pdf / word 
- FTA952 - 2nd Util. (pdf / word 
- FTA953 - 2nd Util. (pdf / word 


**BYPASS/ISOLATION
POWER TRANSFER
SWITCHES**

**(FOR USE WITH ELECTRIC FIRE
PUMP CONTROLLERS)**

FireCat[®]

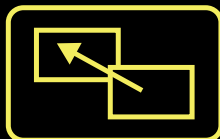

MAIN
MENU

 


ENTER



EXIT
PROGRAM

 
MENU

- **BROCHURE**
- MODEL NUMBER SELECTION GUIDE
- SPECIFICATIONS (pdf / word )
- DRAWINGS
- INSTRUCTIONS


**BYPASS/ISOLATION
POWER TRANSFER
SWITCHES**

**(FOR USE WITH ELECTRIC FIRE
PUMP CONTROLLERS)**

FireCat[®]

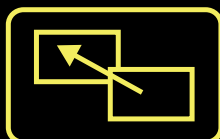

MAIN
MENU

 


ENTER



EXIT
PROGRAM

 
MENU

- BROCHURE
- **MODEL NUMBER SELECTION
GUIDE**
- SPECIFICATIONS (pdf / word )
- DRAWINGS
- INSTRUCTIONS


**BYPASS/ISOLATION
POWER TRANSFER
SWITCHES**

**(FOR USE WITH ELECTRIC FIRE
PUMP CONTROLLERS)**

FireCat[®]

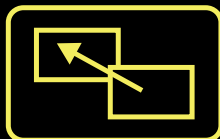

MAIN
MENU

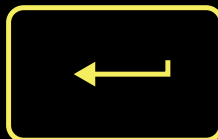 


ENTER



EXIT
PROGRAM

 
MENU

- BROCHURE
- MODEL NUMBER SELECTION GUIDE
- **SPECIFICATIONS** (pdf / word )
- DRAWINGS
- INSTRUCTIONS


**BYPASS/ISOLATION
POWER TRANSFER
SWITCHES**

**(FOR USE WITH ELECTRIC FIRE
PUMP CONTROLLERS)**

FireCat[®]

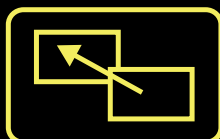

MAIN
MENU

 


ENTER



EXIT
PROGRAM

 
MENU

- BROCHURE
- MODEL NUMBER SELECTION GUIDE
- SPECIFICATIONS (pdf / word )
- **DRAWINGS**
- INSTRUCTIONS


**BYPASS/ISOLATION
POWER TRANSFER
SWITCHES**

**(FOR USE WITH ELECTRIC FIRE
PUMP CONTROLLERS)**

FireCat[®]

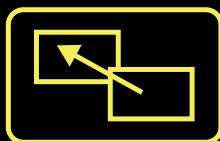

MAIN
MENU

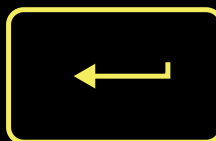 


ENTER



 
EXIT
PROGRAM

MENU


- BROCHURE
- MODEL NUMBER SELECTION GUIDE
- SPECIFICATIONS (pdf / word )
- DRAWINGS
- **INSTRUCTIONS**

**DIESEL ENGINE FIRE
PUMP CONTROLLERS
FOR CLASS 1, DIV 2
APPLICATIONS**

FireCat[®]

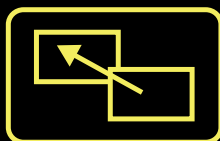

MAIN
MENU

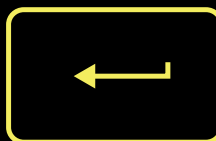 


ENTER



 
EXIT
PROGRAM

MENU


- **BROCHURE**
- SPECIFICATIONS (pdf / word) 
- INSTRUCTION MANUAL
- MODEL NUMBER SELECTION GUIDE

**DIESEL ENGINE FIRE
PUMP CONTROLLERS
FOR CLASS 1, DIV 2
APPLICATIONS**

FireCat[®]

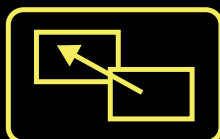

MAIN
MENU

 


ENTER



 
EXIT
PROGRAM

MENU


- BROCHURE
- **SPECIFICATIONS** (pdf / word) 
- INSTRUCTION MANUAL
- MODEL NUMBER SELECTION GUIDE

**DIESEL ENGINE FIRE
PUMP CONTROLLERS
FOR CLASS 1, DIV 2
APPLICATIONS**

FireCat[®]

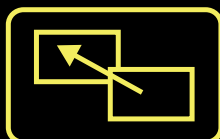

MAIN
MENU

 


ENTER



 
EXIT
PROGRAM

MENU


- BROCHURE
- SPECIFICATIONS (pdf / word )
- **INSTRUCTION MANUAL**
- MODEL NUMBER SELECTION GUIDE

**DIESEL ENGINE FIRE
PUMP CONTROLLERS
FOR CLASS 1, DIV 2
APPLICATIONS**

FireCat[®]

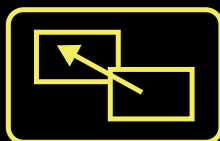

MAIN
MENU

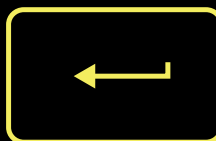 


ENTER



 
EXIT
PROGRAM

MENU



- BROCHURE
- SPECIFICATIONS (pdf / word )
- INSTRUCTION MANUAL
- **MODEL NUMBER SELECTION GUIDE**

**HIGH VOLTAGE
FIRE PUMP
CONTROLLERS**

FireCat[®]

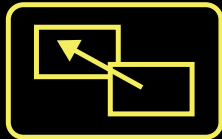

MAIN
MENU

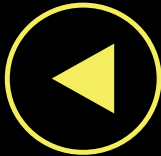  

ENTER



 
EXIT
PROGRAM

MENU



- **DIMENSIONAL DRAWING**
- WIRING SCHEMATIC
- FIELD CONNECTIONS

**HIGH VOLTAGE
FIRE PUMP
CONTROLLERS**

FireCat[®]

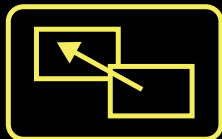

MAIN
MENU

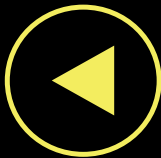  

ENTER



 
EXIT
PROGRAM

MENU



- DIMENSIONAL DRAWING
- **WIRING SCHEMATIC**
- FIELD CONNECTIONS

**HIGH VOLTAGE
FIRE PUMP
CONTROLLERS**

FireCat[®]

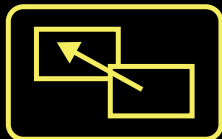

MAIN
MENU

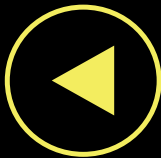  

ENTER



EXIT
PROGRAM

MENU

- DIMENSIONAL DRAWING
- WIRING SCHEMATIC
- **FIELD CONNECTIONS**